



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Alre

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">EKFM2/0-10/100</a>	built-in duct sensor
<a href="#">JA060100 / JSF-1E</a>	flow protector
<a href="#">1599254</a>	ALRE Differenzdruck-Schalter
<a href="#">G8000004 / JSL-20</a>	airflow monitor
<a href="#">p/n: JA010100; Type: HI-1</a>	Channel hygostat mech.
<a href="#">ATR83.100</a>	thermostat
<a href="#">KR 85.400-5</a>	regulator
<a href="#">P/N: C1850506 Type: KR 85.406-2</a>	Double thermostat
<a href="#">KR 80.309 - C1801590</a>	
<a href="#">P/N: JA070100 Type: JSL-1E</a>	Air flow sensing relay
<a href="#">P/N: D4780041 Type: ETR 78.005</a>	Differenz-Temperaturregler
<a href="#">H5309098 / JDL-111</a>	Differential pressure switch
<a href="#">P/N: G9030200 Type: HFC 10/S</a>	
<a href="#">P/N: G9030140 Type: HFP 100/S</a>	Hülsenfühler
<a href="#">P/N: G9040010 Type: AFP 100</a>	Außentemperaturfühler
<a href="#">P/N: H530996 Type: JDW-5</a>	Differential pressure switch
<a href="#">H530996 / JDW-5</a>	Differential pressure switch
<a href="#">P/N: H531000, Type: JDW-5 Z</a>	Differential pressure switch with angle bracket
<a href="#">G9240020</a>	
<a href="#">H530960 / JDL 116</a>	differential pressure switch
<a href="#">P/N: G9240020 Type: MUD/4-20/0.16</a>	Druckmessumformer für Fluide und Gase
<a href="#">P/N: H5309136 Type: JDL-115</a>	
<a href="#">H5309136</a>	Pressure switch
<a href="#">JDL-112</a>	Differential pressure switch
<a href="#">C1850506 / KR 85.406-2</a>	Double boiler thermostat
<a href="#">P/N: H531001 Type: JDW 3-Z</a>	Differential Pressure Switch
<a href="#">P/N: JA042200 Type: JET-130 XF</a>	SWITCH, THERMOSTAT
<a href="#">P/N: JA044800 Type: JTF-112</a>	THERMOSTAT, FROST PROTECTION
<a href="#">P/N: E6090330 Type: JTF-21/12</a>	THERMOSTAT, ANTI-FREEZE
<a href="#">JDL-112 (H5309100)</a>	Differential pressure switch
<a href="#">P/N: JA060100, Type: JSF-1E</a>	Flow switch
<a href="#">KA000200</a>	Universalkapillarthmostat
<a href="#">KA999901</a>	fastening set
<a href="#">KA000201</a>	Universal capillary thermostat
<a href="#">KA969903</a>	sensor well
<a href="#">H5309136 / JDL 115</a>	Differential pressure switch

Product	Description
<a href="#">JSF-1 E (JA060100)</a>	Flow switch
<a href="#">C1801743</a>	thermostat
<a href="#">G9270020</a>	differential pressure sensor
<a href="#">H5309229</a>	connection set with duct connections made of plastic
<a href="#">KA000200 / RTKSA-002.410</a>	
<a href="#">IT RTKSA-001.300</a>	Universal Capillary Thermostat KA000102
<a href="#">KA969901</a>	Thermowell
<a href="#">IT JZ-29</a>	Mounting kit
<a href="#">1599244</a>	
<a href="#">1599252 JDL-112</a>	differential pressure switch
<a href="#">RTBSS-111.250/05</a>	ALRE Control Cabinettherm
<a href="#">JA060300 / JSF-2 E</a>	flow switch
<a href="#">JA070100</a>	Industrial Relay
<a href="#">JBT-22A</a>	Electronic twostage controller
<a href="#">RTKSA-000.200 (KA000001)</a>	Universal capillary thermostat KA000001
<a href="#">E6090301 / JTF-1</a>	antifreeze thermostat
<a href="#">JDL-115 / H5309136</a>	differential pressure switch
<a href="#">JA046200 / JET-120 RF</a>	
<a href="#">KTRTB-251.108</a>	thermostat
<a href="#">E6120077 / JTL-17 NR</a>	Air heater thermostat
<a href="#">JMT-206 X</a>	capillary thermostat
<a href="#">JSF-1E</a>	flow switch
<a href="#">G8000300</a>	dew point sensor
<a href="#">D4780587</a>	dew point monitor
<a href="#">JTL-8</a>	Air heater thermostat
<a href="#">G8000428 / WSERD-134.446</a>	Airflow monitor
<a href="#">KA001100 / RTKSA-014.210</a>	Thermostat
<a href="#">KA979901 / THK-2-100x17</a>	Immersion sleeve
<a href="#">KA999902 / JZ-30</a>	mounting kit
<a href="#">RTKSA-003.310+THK-2-100+JZ-29</a>	Universal capillary thermostat
<a href="#">KR 80.310</a>	Universal capillary thermostat
<a href="#">JTL 11</a>	
<a href="#">P/N: E6090328, Type: JTF-1/12</a>	1-stage 12m capillary frost protection thermostat
<a href="#">Type: JSF-1RE (JA060200)</a>	Flow Monitor
<a href="#">E6090320 / JTF-21</a>	Frost protection thermostat
<a href="#">JZ-05/6M</a>	Mounting clips (metal)
<a href="#">JZ-05/6K</a>	mounting clips
<a href="#">JZ-04</a>	Capillary tube outlet for air ducts
<a href="#">E6100048 / JTU-5</a>	Duct thermostat
<a href="#">JDI-0</a>	
<a href="#">JDL-115</a>	Differential pressure switch
<a href="#">E 6060011 / JMT-202 X</a>	Two stage thermostat
<a href="#">KTRRN-267.014</a>	Control cabinet thermostat
<a href="#">JMT-203XF</a>	
<a href="#">H530978 / JDL-116 A</a>	Differential pressure switch

<b>Product</b>	<b>Description</b>
<a href="#">G8000299 / TPS 1</a>	Dew point sensor
<a href="#">D4780572 / WFRRN-210.018</a>	Dew point monitor
<a href="#">D4780587 / WFRRN-240.018</a>	Dew point monitor
<a href="#">RTKSA-204.020</a>	antifreeze thermostat
<a href="#">RTKSA JZ-31 KA999903</a>	RTKSA JZ-31 pipe mounting attachment controller KA999903
<a href="#">JTL-8NRW(TW/STB)</a>	
<a href="#">RTKSA-001-301</a>	IMMERSION THERMOSTAT
<a href="#">THK-2-100</a>	POCKET
<a href="#">E6120038 / JTL-8 NR</a>	Air heater thermostat
<a href="#">JZ-29</a>	
<a href="#">WSERD-534.446</a>	