



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Anderson-Negele

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">TFP-161/050/6MM/6MM/MPU /MB0-150</a>	Temperature Sensor
<a href="#">74162.0311</a>	
<a href="#">P/N: 7536.1101, Type: LAR-361/1/M12</a>	level sensor
<a href="#">DAC-341/0,2 REL</a>	Drucksensor
<a href="#">B53.711312</a>	EMZ-132
<a href="#">B53.711312 / EMZ-132</a>	weld-in socket
<a href="#">EMZ-352 WELD IN SLEEVE</a>	
<a href="#">ITM-3</a>	ANDERSON-NEGELE
<a href="#">NCS-11/PNP</a>	Cap.limit level switch
<a href="#">NCS-11/PNP/KF/M12</a>	Level switch
<a href="#">NVS-146/200/M /X/X</a>	Single-point level indicator
<a href="#">NVS-146/500/X/X/X</a>	The conductivity of EMSZ-132 transmitter
<a href="#">TFP-100-BAT/S050/U 74100.11999050</a>	Temperature sensor with digital display
<a href="#">p/n. 74160.0511 Type TFP-160/050/6MM/6MM/MPU /MB0-150</a>	
<a href="#">TFP-162/020/4MM/4MM/MPU /MB0-150</a>	
<a href="#">TFP-41/100/6MM/6MM/MPU /TB0-150/X</a>	Sensor Temperature
<a href="#">doh-VA-pt</a>	LC digital display
<a href="#">7449.2014 TFP-49/200/6MM/4MM/MPU /TBSONDER</a>	
<a href="#">7442.0184, TFP-42P/017/4MM/4MM/MPU /TB0-200</a>	
<a href="#">7712.7870</a>	ILM-2/L20/M12
<a href="#">7012.00011</a>	NCS-12/PNP/KF/M12
<a href="#">0320.6010</a>	Niveaugerät vnv-wd 230VAC
<a href="#">74160.1513</a>	
<a href="#">8900</a>	
<a href="#">Niveaugerät vnv-v 24VDC</a>	Level control unit for conductive probes
<a href="#">ILM-2/L20/PG</a>	
<a href="#">TFP-160/150/6MM/3MM/MPU/3B (8900)</a>	Temp. Fühler 1xPt100, Klasse 1/3B
<a href="#">NSL-F /00/1100/10/S1/O/2/A42/P/X/X/X/X</a>	Füllstandssensor
<a href="#">7441.0511 TFP-41/050/6MM/6MM/MPU /TBSONDER/C/-20,0/150,0/X</a>	Temp. probes
<a href="#">znv-z 24VDC</a>	Niveaugerät
<a href="#">TFP-40/050/6MM/6MM/MPU /TB0-150</a>	
<a href="#">VGW-2</a>	Limit sensor
<a href="#">TFP-160/150/6MM/3MM/MPU +/-0,1K</a>	
<a href="#">TFP-160/150/6MM/3MM/3B/MPU /MB0-100</a>	
<a href="#">M12-Kabel M12-PVC/4-5m</a>	

Product	Description
<a href="#">EMS-132</a>	
<a href="#">BST-130</a>	
<a href="#">LAR-361/0</a>	Füllstandssensor
<a href="#">P/N : 7011.00001, Type : NCS-11/PNP/M12</a>	Chap. limit level switch
<a href="#">NVS-120 /X/X/1000B/850B/500B/X/X/M12</a>	Niveausonde
<a href="#">NVS-120 /MNV-1/X/1000B/850B/500B/X/X/X</a>	Niveausonde
<a href="#">TFP-41/030/12MM/12MM/MPU /TB0-100/M12</a>	
<a href="#">DAC-341/4.0REL 7534.11400</a>	
<a href="#">ILM-4 /L20/V40/V/A62/N/S/W/X 7741</a>	
<a href="#">NSL-F /00/0450/10/S1/O/2/A42/M/X/X/X/X</a>	Potentiometrischer Füllstandssensor
<a href="#">DAN-HH/S/14REL/M12</a>	Pressure transmitter
<a href="#">NVS-120 /X/X/1000B/850B/500B/X/X/X</a>	Niveausonde
<a href="#">TFP-162/030/6MM/6MM/MPU /MB0-150</a>	
<a href="#">TFP-162/030/6MM/6MM/MPU /MB0-50</a>	Sensor
<a href="#">TFP-41/020/4MM/4MM/MPU /TB0-150</a>	Temperature Sensor
<a href="#">P/N: B53.711312, Type: EMZ-132</a>	weld-in socket
<a href="#">NVS-166/500/M</a>	Measuring sensors
<a href="#">TFP-40/300/6MM/6MM/MPU /HART</a>	
<a href="#">NVS-345 /X/X/850B/500B/200B/X/X</a>	
<a href="#">TFP-41/050/6MM/3MM/MPU /TB0-150</a>	
<a href="#">FWS-141/X/X/M12</a>	Ultrasonic Flow Switch
<a href="#">M12-PVC/4-5m</a>	M12-Kabel
<a href="#">M12-Kabel PVC/4G-5m</a>	
<a href="#">NCS-M-11</a>	Cap.limit level switch
<a href="#">NVS-166/500</a>	Einstabgrenzstandmelder
<a href="#">P/N: 7116.3500, Type: NVS-163/500</a>	Standard level indicator
<a href="#">NCS-12/PNP/KF/M12</a>	Cap. point level switch for aqueous solutions
<a href="#">TFP-168P/037/3MM/3MM/MPU /MB0-100</a>	
<a href="#">ESP-W-ASME-3/4"/0.4µm-S-3.1</a>	
<a href="#">RAC/ESP</a>	
<a href="#">DFC/ESP</a>	
<a href="#">B53.711322 / EMK-132</a>	Collar weld-in fitting
<a href="#">VTV-2</a>	isolating amplifier for DIN rail mounting
<a href="#">7114.6200 , type NVS-146/200/X/X/X</a>	Einstabgrenzstandmelder
<a href="#">TFP-162/030/6MM/6MM</a>	Sensor
<a href="#">NCS-GWL-11/PNP</a>	Cap. limit level switch
<a href="#">TFP-162/020/4MM/4MM</a>	sensor
<a href="#">PEM-UC 24-230VAC/DC</a>	
<a href="#">NVS-186/200/M/H</a>	
<a href="#">PF-S1 /981/C/160/1/A/0/0/A/E2A/B/061/0/C/1/A/64</a>	Modular pressure sensor PF
<a href="#">NCS-12/PNP/H/KF/M12</a>	Level sensor
<a href="#">ZNV-2 /24VDC/2A/1C1D/0750/00</a>	Level control unit for conductive probes
<a href="#">NCS-61P/PNP (p/n. 7061.20011)</a>	Capacitive Limit Switch
<a href="#">TFP-159/249/4MM/4MM/M12/MPU /MB0-150</a>	
<a href="#">PF-S1 /981/C/123/1/A/0/0/A/E2A/B/999/0/A/1/A/64 (p/n. 7550)</a>	

Product	Description
<a href="#">LAR-761/0/TC1/M12 (p/n.7536.035012)</a>	level sensor
<a href="#">TFP-168P/037/3MM/3MM (74168.0373)</a>	temperature sensor
<a href="#">NSL-F /00/0800/10/S1/O/4/A42/P/X/M/X/X</a>	Level sensor
<a href="#">TFP-162/050/4MM/4MM/MPU /MB0-150</a>	
<a href="#">M12-Kabel M12-PVC/4-10m</a>	wires
<a href="#">TFP-90.2/52/025/6MM/6MM-3.1</a>	
<a href="#">TFP-162/035/4MM/4MM/MPU /MB0-150</a>	
<a href="#">TFP-162/030/4MM/4MM/MPU /MB0-150</a>	
<a href="#">DAN-HH/TC1.5/2ABS/M12</a>	
<a href="#">NCS-11/PNP (7011.00000)</a>	Limit switch
<a href="#">NCS-12/PNP/X/KKF/M12</a>	
<a href="#">NCS-L-12/50/PNP/X/KKF/M12</a>	
<a href="#">NCS-L-12/18/PNP/X/KKF/M12</a>	
<a href="#">VNV-2/24VDC/4A/4D/0750/00</a>	Level control unit for conductive probes
<a href="#">ILM-4 /L20/S01/V/I63/D/L/W/X</a>	Conductivity meter
<a href="#">TFP-59/250/4MM/4MM/MPU /TB0-100 (p/n 7459.2511)</a>	
<a href="#">NVS-120 /X/X/500B/500B/500B/500B/X/M12</a>	sensor
<a href="#">78014.110300 - FTS-141/W</a>	flow relay
<a href="#">ITM-51R /SOL/I42/C/L/M/X</a>	sensor
<a href="#">TFP-49/200/6MM/4MM/MPU /TB0-150/X (7449.2014)</a>	Temperature Sensor
<a href="#">7200 M12-PVC/8-SS /05 (5 m)</a>	Cable Remote Control
<a href="#">NCS-12/PNP/M12</a>	Capacitive point level switch
<a href="#">NVS-146/200 /X/X/X</a>	Single limit indicator
<a href="#">TFP-160/050/6MM/6MM/MPU /MB0-100 (74160.0511)</a>	
<a href="#">TFP-41/020/6MM/6MM/PG (7441.02001)</a>	Temperature sensor
<a href="#">NSL-F /00/0800/10/S1/O/2/I42/M/X/M/X/X</a>	Potentiometric level sensor
<a href="#">HMP-E050200</a>	turbine flow meter
<a href="#">TFP-168P/037/3MM/3MM</a>	
<a href="#">TFP-40/070/8MM/8MM 7440.07008</a>	Temp. probes
<a href="#">B53.711322</a>	Collar Sleeve
<a href="#">TSMF /C01/X/0/0030/06/X/0/0/H/20C/4</a>	Temperature sensor for food
<a href="#">TSMF /C01/X/0/0030/04/X/0/0/H/15C/4</a>	Temperature sensor for food
<a href="#">TFP-44/010/PG</a>	
<a href="#">NVS-146/200-8/M /X/X</a>	Single distance detector
<a href="#">TSMF /C02/X/0/0070/06/X/0/0/H/15C/4</a>	Temperature sensor for food
<a href="#">74168.0374</a>	
<a href="#">ILM-4 /L50/S01/V/I63/D/S/W/X</a>	Inductive conductivity meter
<a href="#">DAN-HH/S/2REL/M12</a>	Pressure sensor
<a href="#">ILM-4 /L50/S01/V/I62/D/S/W/X</a>	Inductive conductivity meter
<a href="#">TSMF /TC1/H/0/0050/08/X/0/0/H/15C/4 (Mat. No.: 7402)</a>	Food temperature sensor
<a href="#">TFP-40/090/6MM/6MM / 8900</a>	TEMPERATURE SENSOR
<a href="#">TFP-40/090/6MM/6MM/MPU /TB0-150/M12 / 7440.09011</a>	Temperature probe
<a href="#">TFP-49/100/6MM/6MM/PG</a>	temperature probe
<a href="#">NVS-120/X/X/GEW/GEW/GEW/X/X/X</a>	Limit level detector
<a href="#">TFP-41/050/6MM/6MM/MPU /TB0-150/X</a>	

Product	Description
<a href="#">TFP-41/025/6MM/6MM/MPU /TB0-150/X</a>	
<a href="#">TSMF /C02/X/0/0050/06/X/0/0/H/15C/4</a>	Food Temperature Sensor
<a href="#">NVS-186/500</a>	Limit level detector
<a href="#">ILM-4 /L20/S01/V/163/N/L/W/X</a>	Inductive conductivity meter
<a href="#">HMP-E025200</a>	turbine flow meter
<a href="#">P/N: 245.1506, Type: NCI-45-115-02090U91-00666</a>	Universal transmitter
<a href="#">P/N: K15.051144, Type: M12-PVC/4G-10m</a>	PVC cable 4 pin
<a href="#">HTE000</a>	3-wire signal probe
<a href="#">P/N: 7402, Type: TSMF/C03/X/0/0010/08/X/0/0/H/15C/4</a>	Food temperature sensor
<a href="#">P/N : 7011.00001-L60 , Type : NCS-11/PNP/M12-L60</a>	- Schap. Limit level switch
<a href="#">TSMF /C01/X/0/0020/04/X/0/0/H/15C/4</a>	temperature sensor
<a href="#">TSMF /N01/X/0/0050/06/X/0/0/H/15C/4</a>	Temperature sensor for food
<a href="#">NVS-146/200/M /X/M12 / 7114.6210</a>	Standard level indicator
<a href="#">L3AS608810E22AW000</a>	Level and Pressure Sensor
<a href="#">L3S508810</a>	Sensor Stem
<a href="#">TFP-18/100/6MM/6MM / 7418.1001</a>	
<a href="#">TSMF /C01/S/0/0020/04/X/0/0/H/15C/4</a>	Temperature sensor
<a href="#">P/N: 7459.0701, Type: TFP-59/070/4MM/4MM</a>	temperature sensor
<a href="#">P/N: 7405, Type: TSMP /M01/X/0/0037/03/X/0/0/0/000/4</a>	temperature sensor
<a href="#">NSL-F /00/0782/10/TC1/Z/2/142/M/S/P/X/X</a>	Potentiometric level sensor
<a href="#">NCS-L-11/PNP/KF /50</a>	Limit level switch
<a href="#">L3E22AB000</a>	Sensor Head
<a href="#">P/N: 7011.00020, Type: NCS-11/PNP/X/KKF/X</a>	Limit level switch
<a href="#">P/N: 7011.00020-L, Type: NCS-L-11/PNP/X/KKF/X /50</a>	Limit level switch
<a href="#">P/N: 7536.035012, Type: LAR-761/O/TC1/M12</a>	level sensor
<a href="#">P/N: 7536.11012, Type: LAR-761/1/TC1/M12</a>	level sensor
<a href="#">P/N: 7536.1100, Type: LAR-361/1</a>	level sensor
<a href="#">P/N: 7211, Type: NSL-F /00/0700/10/TC1/O/1/142/P/S/P/X/X</a>	Potentiometric level sensor
<a href="#">P/N: K15.051043, Type: M12-PVC/4-10m</a>	PVC cable 4-pin
<a href="#">TSMP /I52/S/0/0025/06/X/3/1/H/15C/4</a>	Mini temperature sensor
<a href="#">P/N: 0321, Type: VNV-2 /230VAC/2R/1CT/0000/00</a>	Level control device for conductive probes
<a href="#">NCS-81P/PNP</a>	Cap point level switch
<a href="#">P/N: 7012.00000, Type: NCS-12/PNP</a>	Limit level switch
<a href="#">EM /064/01/004/1/1/1/4/B/0/0/0/0</a>	EM pressure gauge
<a href="#">VNV-2 /115VAC/2R/2CT/0000/00</a>	Level control device for conductive probes
<a href="#">NVS-345 /X/X/850B/500B/500B/200B/M12</a>	
<a href="#">FMI-C/ODT/1"/TC/X/DC/X</a>	Magnetic-inductive flow meter
<a href="#">DAC-341/0.4REL/M12</a>	pressure sensor
<a href="#">DAC-341/0.2REL/M12</a>	pressure sensor
<a href="#">VTR-2/A</a>	Temperature controller for DIN rail mounting
<a href="#">TSBF /C02/X/0/0050/06/X/0/0/H/10C/0/1/S</a>	
<a href="#">9620.3750 (CAL/ILM)</a>	ILM-4 factory calibration certificate
<a href="#">2505.8800 VGW-2</a>	Limit indicator for DIN rail mounting
<a href="#">TSMF /N01/X/0/0150/06/X/0/0/0/000/4</a>	temperature sensor for food
<a href="#">2970.0200</a>	programming adapter

Product	Description
<a href="#">110001709998/001</a>	
<a href="#">NSL-M /00/0870/10/S0/8/O/O/A2M/M12/X/S/C12</a>	Potentiometric level sensor
<a href="#">NCS-11/PNP/HD/KKF/M12</a>	
<a href="#">ILM-4 /L20/S01/V/I62/D/L/W/X</a>	
<a href="#">TSBF /N01/X/0/0100/06/X/0/0/H/15C/0/1/S</a>	
<a href="#">NCS-11/PNP/X/X/X-L60</a>	level sensor
<a href="#">NCS-L-11/PNP/X/X/X-L60 /50</a>	level sensor
<a href="#">IOM-1 IO-Link Master USB</a>	
<a href="#">ILM-4-L20/S01/V/I63/D/S/W/X</a>	Inductive conductivity meter
<a href="#">TSBF /C02/X/0/0055/06/X/0/0/H/10C/0/1/S</a>	
<a href="#">2414.6882</a>	temperature transmitter
<a href="#">M12-PVC/8-PBT /05</a>	Connecting cable
<a href="#">M12-PVC/8-SS /05</a>	8 pin cable
<a href="#">DAN-HH/S/14ABS/M12</a>	pressure sensor
<a href="#">DAN-HH / S / 7ABS / M12 (0-7BAR)</a>	pressure sensor
<a href="#">NVS-146/200/M/X/X 7114.6210</a>	PC LEVEL SENSOR
<a href="#">TSMP /T05/X/0/0025/04/X/3/4/H/M12/4</a>	Mini temperature sensor
<a href="#">TSBF /T05/X/0/0105/04/X/0/0/H/15C/0/1/S</a>	temperature sensor
<a href="#">MPPSA341A0EBHALA1A</a>	Pressure Transmitter
<a href="#">TSMF /M03/X/4/0249/04/X/0/0/H/20C/4</a>	temperature sensor for food
<a href="#">K15.050644</a>	wires
<a href="#">TSBF /C02/X/2/0020/06/X/0/0/0/000/0/2/S</a>	Food temperature sensor
<a href="#">ITM-51 /SOL/V/I53/D/L/W/X</a>	turbidity meter
<a href="#">TSMF/G01/X/0/50/06/X/0/0/0/000/4</a>	Temperature sensor
<a href="#">TSMF /C01/X/0/0030/06/X/0/0/H/15C/4</a>	temperature sensor for food
<a href="#">7012.00001 / NCS-12/PNP/M12</a>	
<a href="#">EL /061/01/109/1/1/1/1/A/0/0/0/0</a>	Pressure gauge for food applications EL
<a href="#">LAR-361/0/X/X/P</a>	TRANSMITTER
<a href="#">TSBF /C02/X/0/0020/04/X/0/0/H/15C/0/1/S</a>	
<a href="#">NCS-L-11/PNP/M12 /150</a>	Cap. limit level switch
<a href="#">TSBF /C02/X/0/0020/03/X/0/0/H/15C/0/1/S</a>	Food temperature sensor
<a href="#">TSBF /C02/X/0/0050/06/3/0/0/H/15C/0/1/S</a>	SENSOR TEMPERATURE
<a href="#">LS11651100250</a>	Capacitive point level detection
<a href="#">TSBP /C01/X/0/0017/04/X/3/0/H/20C/1/M/0</a>	
<a href="#">ILM-4 /L50/S01/V/I63/A/L/W/X</a>	Conductivity meter
<a href="#">ZNV-2 /24VDC/2A/1CT/0000/00</a>	LEVEL RELAY
<a href="#">MPU-4, 0...+200°C // 2414.6884</a>	Transmitter
<a href="#">TSMP /M01/X/0/0037/03/X/0/0/H/15C/4</a>	Mini temperature sensor
<a href="#">TSBF /C03/X/0/0000/00/X/0/0/H/15C/0/1/S</a>	Food temperature sensor
<a href="#">HMP-E040200</a>	turbine flow meter
<a href="#">AMC-352/DN25</a>	Clamp-Adapter
<a href="#">NSL-F /00/0600/10/S01/O/4/I42/P/X/X/X/X</a>	Level sensor
<a href="#">NCS-11/PNP/M12</a>	Cap. limit level switch
<a href="#">TSMF /C03/X/0/0000/00/X/0/0/H/10C/4</a>	Food temperature sensor Housing design: Mini version

Product	Description
<a href="#">NSL-F /00/0765/10/TC1/Z/2/142/M/S/P/X/X</a>	
<a href="#">NSL-F /00/0450/10/TC1/Z/2/142/M/S/P/X/X</a>	
<a href="#">NVS-146/200/M- 7114.6210</a>	Single rod limit detector
<a href="#">7405 - TSMP /M01/X/0/0037/03/X/0/0/H/15C/4</a>	
<a href="#">HMP-E600-025</a>	
<a href="#">TSBF /N01/X/0/0200/06/4/0/0/H/M43/0/1/S</a>	
<a href="#">TSMP /M01/X/0/0160/03/X/0/0/H/15C/4</a>	Mini temperature sensor
<a href="#">TSMF /T05/X/0/0020/06/X/0/0/H/15C/4</a>	
<a href="#">7011.00000-L NCS-L-11/PNP /50</a>	
<a href="#">NVS-50 /X/X/500/500/X/X/X/X</a>	Conductive multi-rod limit level detector
<a href="#">HB100510A0200</a>	HB Mini Level Transmitter
<a href="#">LS10040100000</a>	
<a href="#">NVS-345 /X/X/1000B/850B/500B/X/M12</a>	
<a href="#">TSMP /C01/X/0/0017/04/X/3/0/H/15C/4</a>	Mini temperature sensor
<a href="#">TSMF /M01/X/0/0037/03/X/0/0/H/15C/4</a>	
<a href="#">TSMF /G01/X/0/0050/06/X/0/0/H/10C/4</a>	
<a href="#">NCS-12/PNP/M12 7012.00001</a>	Chapter limit sensor for aqueous solutions with Er > 2
<a href="#">BC110P</a>	
<a href="#">TSBF /N01/X/0/0150/06/X/0/0/H/15C/0/1/S</a>	Food temperature sensor
<a href="#">TSMP /M01/X/0/0037/03/X/0/0/H/20C/4---7405</a>	Mini temperature sensor
<a href="#">NCS-L-11/PNP/M12 /50</a>	
<a href="#">NCS-11/PNP/X/KKF/M12</a>	
<a href="#">LAR-761/4/EHS/X/X/S</a>	Pressure sensor
<a href="#">FTS-141/X</a>	Calorimetric flow monitor
<a href="#">TSBF /N01/X/0/0100/06/X/0/0/0/000/0/1/S</a>	Food temperature sensor
<a href="#">NVS-166/200/M</a>	Single-rod level detector
<a href="#">TSBF/C05/X/0/X/00/X/0/0/H/M00/0/1/S</a>	
<a href="#">NSL-F /00/1500/10/S01/O/2/142/M/X/M/X/X</a>	
<a href="#">B53.713520</a>	
<a href="#">TSBF/C02/X/6/50/04/X/0/0/H/15C/0/1/S</a>	Food temperature sensor
<a href="#">NSL-F /00/0650/10/S01/O/2/142/M/X/W/X/X</a>	Potentiometric level sensor
<a href="#">TSMF /G01/X/0/0050/06/X/0/0/H/15C/4</a>	
<a href="#">TSMF /M01/X/0/0083/03/X/0/0/0/000/4</a>	
<a href="#">TSMF /C02/X/0/0020/04/X/0/0/H/15C/4</a>	
<a href="#">MPFS /7/004/1/A/0/A/E/2/A/B/999/0/A/1/-1.00/5.00</a>	
<a href="#">11 EL033011624011A1000</a>	
<a href="#">11 EL033011621011A1000</a>	
<a href="#">20 EL034011621011A1000</a>	
<a href="#">MAN-63 / S / 0...11 / X / X / X / L 0...11</a>	
<a href="#">NVS-345 /X/X/500B/500B/X/X/X</a>	
<a href="#">NCS-11/PNP/H/KF/M12</a>	
<a href="#">TSMF /M02/S/0/0037/03/X/0/0/H/20C/4</a>	
<a href="#">TSMF /M02/S/0/0083/03/X/0/0/H/20C/4</a>	
<a href="#">TSMP /M01/X/0/0037/03/X/0/0/H/10C/4</a>	temperature sensor
<a href="#">ILM-4 /L50/S01/V/163/D/L/W/X</a>	inductive conductivity meter

Product	Description
<a href="#">VNV-2 /24VDC/4A/2CT/0000/00</a>	
<a href="#">NCS-L-12/50/PNP/M12</a>	
<a href="#">TSMF /C01/X/0/0050/04/X/0/0/H/15C/4</a>	
<a href="#">LAR-361/0/X/X/S / 7536.0351</a>	
<a href="#">EL /071/01/007/1/1/1/1/A/0/0/0/0</a>	