



ENAPART



93 S Railroad Avenue Unit C
Bergenfield NJ 07621 USA
www.enapart.com
sales@enapart.com



Via del Canneto 35,
Borgosatollo, Brescia - Italia
www.enapart.it
vendite@enapart.it



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu
My Newwork No:3/15 Ataşehir / İstanbul
www.enapart.net
satis@enapart.net



PRIVADA 10 B SUR #3908 COL.
ANZUREZ, C.P. 72530, PUEBLA, PUE
www.enapart.com.mx
sales@enapart.com.mx



Friedrich-Ebert-Anlage 36, 60325
Frankfurt am Main, Germany
www.enapart.de
anfrage@enapart.de



4 boulevard Carnot, 95400
villiers-le-bel, Paris, France
www.enapart.fr
sales@enapart.fr



65049, ОДЕСА, ВУЛИЦЯ ІВАНА
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3
www.enapart.com.ua
sales@enapart.com.ua



MUNICIPIUL BUCUREȘTI, SECTOR 3,
B-DUL BASARABIA, NR.250, CORP P+5
www.enapart.ro
sales@enapart.ro



〒584-0023 大阪府富田林市若松町
東2丁目2番16号
www.enapart.co.jp
sales@enapart.co.jp



PLAZA NUESTRA SEÑORA DE LAS
NIEVES 12 ,LOCAL ,50012,ZARAGOZA
www.enapart.es
ventas@enapart.es



Складова база „Онгъл“, Склад А2, п.к.
4006, гр. Пловдив, България
www.enapart.bg
sales@enapart.bg



3 Austin Mews, High Street, Hemel
Hempstead, HP1 3AF , United Kingdom
www.enapart.co.uk
sales@enapart.co.uk

Bd Sensors

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

BRAND'S PRODUCTS

Product	Description
P/N: 110-4000-1-5-100-100-1-000, Type: DMP 331	Pressure transmitters
26.600 G-1002-R-1-5-100-200-1-000	Pressure transmitter
26.600 G-1002-R-4-5-100-300-1-000	OEM pressure transmitter 26600 G
730-D-2501-1-5-100-200-1-000	DMD 331 Druckmessumformer
110-2500-E-5-100-F00-1-000	Druckmessumformer DMP 331
DMP 331 Code: 110-D733-1-5-100-F00-1-000	Pressure transmitter
110-M400-3-5-M00-F00 - 1-000	Pressure Transmitter DMP 331
110-4002-E-3-100-C00-1-006 / DMP 331	Pressure Transmitter
DMP 331 Code: 110-4000-3-3-M00-300-1-000	pressure transmitter
DMP 331 Code: 110-6001-3-3-M00-300-1-000	Druckmessumformer
DMP 331 Code: 110-M400-3-5-M00-300-1-000	Druckmessumformer
DMP 333 CODE: 130-1003-1-2-100-800-5-000	pressure transmitter
DMP 331 110-4000-3-3-M10-300-1-000	pressure transmitter
600-2502-1-3-G10-100-1-000	Pressure Transmitters
68-D049-K-1-2-1-1-4-2-006-000	Tauchsonde LMK 458
PA 430	sensor
DMP-331 110-1600-1-5-100-100-1-000	PRESSURE TX sensor
DMP 331 Code (aktualisiert): 111-1002-4-3-100-700-1-000	Druckmessumformer
DMP343 100-S250-E-3-M10-300-1-000	PRESSURE TRANSMITTER
LMP 308i	Tauchsonde
DMP 343 100-S050-3-5-100-300-1-000	Druckmessumformer
130-2503-3-3-100-100-5-000	Druckmessumformer DMP 333
DS 200.	Druckmessumformer
PAC-99X - PS32 / USB / UI4 / UI4 / UI4 - 005 - N1	Multichannel Process Display
PAC-141X - PS32 / USB / UI4 / UI4 / UI4 - 005 - N1	Multichannel Process Display
PAC-99X - PS32 / USB / E / E / UI4 - 005 - N1	Multichannel Process Display
PAC-141X - PS32 / USB / E / E / UI4 - 005 - N1	Multichannel Process Display
LMK 351	Einschraubsonde
DMK 351P / Code: 295-D204-1-3-E00-C63-1-1-2-000	Pressure transmitter
100-S050-E-5-M10-300-1-000	Druckmessumformer DMP 343 Ex
26.600 G-1602-R-1-5-100-300-1-070	OEM-Druckmessumformer 26.600G
LMP 308	Tauchsonde
26.600G-1003-R-1-5-100-R40-1-000	OEM-Druckmessumformer
100-S250-E-5-M10-300-1-000	Druckmessumformer
LMK 351 Code: 470-Z030-1-3-100-M00-1-1-2-000	Screw-in probe
26.600G-6001-R-3-5-C10-N40-1-000	OEM Druckmessumformer

Product	Description
787-4003-1-2-5-N01-Z00-1-5-1-000	Elektronischer Druckschalter DS 201P
26.600-G-6001-R -1-5-100-300-1-000	Druckmessumformer
LMK 351	Einschraubsonde LMK 351
DMP 457 Code: 600-2500-E-5-G10-400-1-000	Druckmessumformer DMP 457
DMP 457 Code: 600-6003-E-3-G10-N40-5-070	Druckmessumformer DMP 457
DMP 457 Code: 600-6003-E-3-G10-400-5-000	Druckmessumformer DMP 457
DMP 334 Code: 140-1004-E-3-100-V00-2-000	Druckmessumformer DMP 334
DMP 457 Code: 600-6003-1-3-G10-N00-1-070	Druckmessumformer DMP 457
600-2500-E-5-G10-400-1-000	Druckmessumformer DMP 457
600-6003-E-3-G10-N40-5-070	Druckmessumformer DMP 457
600-6003-E-3-G10-400-5-000	Druckmessumformer DMP 457
140-1004-E-3-100-V00-2-000	Druckmessumformer DMP 334
600-6003-1-3-G10-N00-1-070	Druckmessumformer DMP 457
591-D581-1-B5-TR3-H00-1-1-2-000	Druckmessumformer DMK 457
11C-6002-7-1-100-N00-3-000	Druckmessumformer DMP 320
780-X102-E-1-3-N01-300-1-000	Elektronischer Druckschalter DS 200
M0E-1601-0-B5-0K0-200-1-1-1-1-000	Digitalmanometer BAROLI 02
M0E-4000-0-B5-0K0-200-1-1-1-1-000	Digitalmanometer BAROLI 02
600-1602-E-3-G10-300-1-000	Druckmessumformer DMP 457
M0G-2501-0-B2-0K0-C62-0-1-1-2-000	Digitalmanometer Baroli 02P
110-1002-1-3-100-300-1-000	DMP 331 pressure transmitter
785-LS02-1-1-2-200- C62-1-0-2-000	Elektronischer Druckschalter DS 200P
110-6002-3-3-100-100-5-000	Druckmessumformer DMP 331
110-1002-1-2-100-800-1-000	Druckmessumformer DMP 331
110-2502-1-2-100-800-1-000	Druckmessumformer DMP 331
130-1003-1-2-100-800-5-000	Druckmessumformer DMP 333
130-1603-1-2-100-800-5-000	Druckmessumformer DMP 333
130-2503-1-2-100-800-5-000	Druckmessumformer DMP 333
130-6003-1-2-100-800-5-000	Druckmessumformer DMP 333
DMP-331-110-6001-3-5-1-3-1-000	Druckmessumformer DMP 331
110-M100-3-5-M00-F00 - 1-000	Pressure Transmitter DMP 331
110-M160-3-5-M00-300 - 1-000	Pressure Transmitter DMP 331
430-V152-1-1-3-1-100-3-000	Pressure Transmitter LMP 331
250-4000-1-5-100-H00-1-B-2-000	Druckmessumformer DMK 331
250-4001-1-5-100-H00-1-B-2-000	Pressure transmitter
DMP331P 500-1000-T2-2-TR1-M95-1-0-1-000	pressure transmitter
Type LMK 331 / Code 460-D172-1-5-TA0-K00-7-B-2-000	LMK 331 screw-in probe
130-1003-2-3-M00-D15-5-520	DMP 333 pressure transmitter
RKT 4-07S +2M KAB	Kabeldose Lumberg RKT-4-07S
LMK 351 Code: 470-1001-1-3-TA0-M00-1-1-2-000	Einschraubsonde
785-1002-1-1-5-TA0-D04-1-1-1-200	Elektronischer Druckschalter DS 200P
110-1302-1-2-100-400-1-000	Druckmessumformer DMP 331
250-1302-1-5-100-H00-1-B-2-000	Druckmessumformer DMK 331
Code: 17.600 G-1002-R-1-5-100-300-P-000	OEM Druckmessumformer 17.600G
17.600G-1002-R-1-5-100- N40-2-000 - OEM for Bd Sensors	Druckmessumformer 17.600G

Product	Description
17.600G-4002-R-1-5-100- N40-2-000	17,600 G pressure transmitter
18.601G-6000-R-1-5-100-N40-1-000 - OEM for Bd Sensors	Druckmessumformer 18.601G
18.601G-4001-R-1-5-100-N40-1-000 - OEM for Bd Sensors	Druckmessumformer 18.601G
78H-4000-0-2-3-N01-N00-1-000	Druckschalter DS 200
782-2502-E-1-5-N01-N00-3-1-2-000	Druckschalter DS 201
Nr. 110-M400-3-3-M10-F00-1-000, Typ DMP 331	Pressure transmitter
110-2000-1-5-TR0-H00-1-000	Druckmessumformer
46.606-6001-2-TR0-000	
46.606-1002-2-TR0-000	
46.606-1602-2-TR0-000	
46.606-2502-2-TR0-000	
46.606-4002-2-TR0-000	
LMK 458 768-D049-K-1-2-1-3-4-2-025-000	Tauchsonde
LMK458-768-D290-K-1-2-1-3-4-2-025-000	Tauchsonde
DMP 331 Code - 110-1001-E-3-850-100-1-000	
18.601G-1601-R-1-5-100-300-3-000	Pressure Transmitter
18.605G-4000-M-1-5-1-006-300-1-000	Tauchfähiger OEM Transmitter 18.605 G
850-1-1-100-1-N-000	Plug-on Display for Current Loop with Contacts
110-M400-3-3-M00-F00-1-000	DMP 331 pressure transmitter
DMP 457	Druckmessumformer
590-V602-E-5-TR3-100-1-1-2-000	Pressure Transmitter
591-1002-E-5-TR3-100-1-1-2-000	Pressure Transmitter
210-1503-1-5-100-N40-2-008	Pressure Transmitter
Code: 500-2501-1-3-100-C61-1-0-2-000	Pressure Transmitter
Code: 17.600G-4002-R-1-5-100-300-P-000	Pressure transmitter
18.601G-1000-R-1-8-100-300-1-000	pressure transmitter
Code: 100-4000-1-5-100-300-1-000	
Code: 100-4000-1-5-100-400-1-000	
Code: 100-0600-1-5-100-400-1-000	
Code: 592-3150-1-5-TR3-100-1-1-2-000	
Code: 110-M400-3-3-M10-F00-1-000	
ILAC-MRA	calibration certificate
Code: 18.601G-1600-R-1-8-100-300-1-000	
Code: 600-V502-E-3-G10-100-1-000	
DMP 343 (0 ... 100 mbar)	
DMP 343 (0 ... 300 mbar)	
Code: 18.600G-V502-R-1-5-100-400-1-000	ANALOUGE PRESSURE SENSOR1-5 BAR 4-20mA 1/4"
Code: 250-2003-37-5-210-P00-1-1-2-008	pressure sensor
130-4502-2-3-M00-D15-5-520	PRESSURE TRANSMITTER
250-2503-1-5-TR0-400-1-1-2-000 DMK 331	Druckmessumformer
26.600G-1002-R-1-5-100-300-1-000	Pressure transmitter
OXI14B	Wrench
780-6002-1-2-3-N11-500-3-000	sensor
780-1603-1-2-3-N11-500-3-000	sensor
DMD 331/ Code 730-D-1001-1-8-100-200-1-000	Differenz - Druckmessumformer

Product	Description
46.607-3502-2-TR0-055	
DMP331 Code:110-1000-1-5-100-F00-1-000	Pressure transmitter
DMP-343 Code: 100-S025-3-5-100-300-1-000	Pressure transmitters
DMP343 Code: 100-S050-3-5-100-300-1-000	Druckmessumformer
DMK 331 250-V152-1-5-100-F00-1-1-2-000	Druckmessumformer
600-1002-1-3-G10-100-1-000	Pressure transmitter
782-4000-1-1-5-N01-F00-1-1-2-000	
730-E-1602-E-8-100-200-1-000	Differential Pressure Transmitter
DMP 331P	Industrial Pressure Transmitter
DMK 351P / Code: 295-0400-1-3-100-M00-1-1-2-000	Transmitter with flush diaphragm
DMP 331P, Code: 500-1002-1-3-100-Z33-1-1-1-200	Pressure Transmitter
590-1002-E-5-TS3-Z36-1-K-2-000	
DMP 331 110-M400-3-5-M00-300-1-000	Pressure Transmitter
ZMF2540	Montageflansch
26.600G-V502-R-1-100-300-1-000	26.600 G
DMP 333 130-4003-1-3-100-100-5-000	Industrial pressure transmitter
17.600 G-7003-R-1-5-M10-300-P-000	Pressure Transmitter
18.605G-4000-B-1-5-1-006-300-1-000	Pressure Transmitter
59B-D049-1-2-TR3-H00-1-8-2-000 Type DMK 458	Pressure Transmitter
DMP 331 , code 110-W070-1-3-100-100-1-000	pressure transmitter
DMK 457	Pressure transmitter
18.605G-1001-M-1-5-1-012-300-1-000	OEM pressure transmitter
590-V302-E-5-TS3-Z36-1-K-2-000	DMK 457 pressure transmitter
M04-1602-0-B8-0K0-300-1-2-2-1-000	Digitalmanometer
M00-1602-0-B5-0K0-400-1-1-2-1-000	Digital pressure gauges
470-D736-E-3-M10-M00-1-1-2-000	screw-in probe
LMK 351 471-0400-3-3-M10-M00-1-1-2-000	sensor
600-1602-E-3-G10-300-1-000 Type DMP 457	SENSOR TRANSMITTER SENSOR STRIPPING PUMP
250-6002-1-5-100-400-1-1-2-000 type DMK 331	Pressure Transmitter
250-1003-1-5-100-400-1-1-2-000 Type DMK 331	Pressure Transmitter
381-1001-1-2-1-1-5-1-020-000	level transmitter
LMK 382 Code: 565-2002-1-2-E-1-1-3-010-000	Edelstahl-Tauchsonde LMK 382, inkl. 10m PVC-Kabel
LMP 331, Code: 430-V152-1-1-3-1-100-5-000	Screw-in probe
DMP 331, Code: 110-M160-3-5-M00-300-1-000	Pressure Transmitter
DMP 331, Code: 110-V152-3-3-100-300-1-000	Pressure Transmitter
26.600 G-1002-R-3-5-100-300-1-000	OEM Pressure Transmitter 26.600G
LMK 351 Code: 470-D736-E-3-M10-M00-1-1-2-000	
26.600 G-4002-R-1-5-100-200-1-000	OEM Druckmessumformer 26.600 G
785-LS02-1-1-2-100-C62-1-0-2-200	
17.609 G-3002-R-1-5-M20-U00-2-000	OEM pressure transmitter 17.609G
140-1004-E-3-100-200-2-000	Druckmessumformer DMP 334
17.600G-1002-R-1-5-100-300-Q-000	Pressure Transmitter
110-1602-1-3-100-F00-1-000 (DMP 331)	Pressure Transmitter
DC8-4003-L5-2-207-300-1-000	Druckmessumformer DCT 531
LMP 307 code 450-2501-1-1-1-1-3-1-030-000	Probe

Product	Description
DS 4 (680-1002-1-0-Q00-Q00-5-000-000)	Elektronischer OEM-Druckschalter
380-4000-1-2-E-1-5-1-015-000	Tauchsonde LMK 307
110-1602-1-3-100-500-1-000 (DMP 331)	
250-5002-1-5-100-500-1-1-2-000 (DMK 331)	
566-1600-1-2-1-1-2-3-005-000	Stainless steel probe
P/N: 26.600 G-V302-R-1-5-100-300-1-000	pressure transmitter
110 1002E 3 100 C00 1 006	Pressure transmitter
110-4002-E-3-100-C00-1-006	Pressure transmitter
110-2502-E-3-100-C00-1-006	Pressure transmitter
111-1000-12-2-M00-200-1-115	Pressure Transmitter
LMK 331 (Code : 460-2501-1-5-M10-K00-3-B-2-000)	Screw-in
395-2500-R-C-1-1-3-4-010-000	Immersion probe
110-4000-E-5-850-400-1-000	Pressure transmitter
LMK 458 768-4001-K-1-2-1-1-4-2-000	Sensor
DMP 331 (Code: 110-2500-3-5-100-100-1-000)	Pressure transmitter
DMP457-600-6000-1-3-TR3-F00-1-003-000	Pressure transmitter
DX19-DMP 457 (601-D290-E-3TR3-H00-1-000)	Sensor
140-P15K-E-3-850-V00-2-000	industrial pressure transmitter
30.600G Code: 30.600G-4001-R-1-8-100-300-2-1-000	Pressure transmitter
782-4003-E-2-5-N01-N00-5-1-2-000, Type: DS 201	Pressure Switch
26.600 G , Code: 26.600 G-4001-R-1-5-100-300-1-000	Pressure transmitter
DS200 781-1602-1-2-3-N01-F00-1-000	
DS 200 781-2502-1-2-3-N01-F00-1-000	pressure switch DS 200
17.600 G-1603-R-1-5-100-400-2-000	OEM pressure transmitter 17.600G
730-D-6001-E-5-100-200-1-000	DMD 331 differential pressure transmitter
DMP 331 Code: 110-M400-3-3-M00-300-1-000	Pressure transmitter
100-M010-1-5-100-100-1-000, Type: DMP 343	Pressure transmitter
430-D172-1-1-1-1-M00-3-000	Screw-in probe
DMP 331 110-M100-3-5-M00-F00-1-000	Pressure transmitter
411-2500-R-1-1-1-1-5-010-000	Immersion probe
Type: LMP307, P/N: 450-1000-1-1-1-1-5-2-003-000	sensor
110-LS03-E-3-850-400-1-000	Pressure transmitter
26.600 G-2502-R-1-5-100-200-1-000	Pressure Transmitter
DMD 331 Code: 730-F-0400-E-8-100-800-1-000	differential pressure transmitter
451-1600-1-1-E-1-5-3-150-000	Immersion probe LMP 307
451-1600-1-1-E-1-5-3-070-000	Immersion probe LMP 307
DMP 331	LEVEL SENSORS
DMP 331P (Code: 500-1601-1-3-100-Z00-1-1-1-000)	pressure transmitter
250-6001-1-5-M10-H00-1-B-2-000	Pressure Transmitter
DMP 343 Code: 100-0600-1-5-100-300-1-000	Pressure Transmitter
DMD 331 (Code: 730-E-2001-E-8-N1F-J00-7-000)	Differential Pressure Transmitter
DMP 304 220-6004-1-5-100-P00-041	Hydraulic Pressure Transducer
LMK 307-308-1001-1-2-1-1-5-1-010-000	LEVEL TRANSMITTER
LMK 307-308-1001-1-2-1-1-5-1-020-000	LEVEL TRANSMITTER
LMK 307-308-1001-1-2-1-1-5-1-045-000	LEVEL TRANSMITTER

Product	Description
DMK 331	Pressure Transmitter
LMP 307	Stainless Steel Probe
DMP331-110-1002-1-3-100-H00-1-000	Pressure transmitter
LMP 331	Pressure sensor
451-1000-1-1-1-1-5-2-003-000 - LMP 307	Pressure Sensor
Conductor for 451-1000-1-1-1-1-5-2-003-000	3-conductor
110-1000-1-5-100-200-3-000	Pressure Transmitter
470-1002-E-3-TR0-M00-1-1-2-000	Screw-in probe
111-2502-ES-3-TR1-200-1-037	Pressure Transmitters
131-6002-ES-3-TR1-200-1-037	Pressure Transmitters
131-2503-ES-3-TR1-200-1-037	pressure transmitter
110-P020-ES-3-TR1-200-1-037	pressure transmitter
131-4003-ES-3-TR1-200-1-037	Pressure Transmitters
26.600 G-2503-R-1-5-100-300-1-000	OEM Pressure Transmitter
100-0500-3-5-100-300-1-000	Pressure Transmitter
250-P5K8-E-5-M10-N40-1-1-2-000	
787-4003-0-2-5-N01-Z00-1-5-1-000	
780-1602-1-1-3-N01-F00-1-000	Electronic Pressure Switch
787-1003-0-2-5-N01-Z00-1-5-1-000	Electronic pressure switch
18.605G-2500-M-1-5-1-003-300-1-000	Submersible OEM Transmitter
18.605G-1000-M-3-5-1-003-300-1-000	Submersible OEM Transmitter
DMK 458 Code: 59B-D290-1-2-TR3-F23-1-8-2-000	Pressure Transmitters
LMK 458 Code: 768-D290-K-1-C-1-1-4-2-010-000	Submersible probe
DMP 331 110-6001-3-2-TR0-N40-1-000	
CIT 750-1-U16-U16-UN5-1-4-100-000	Multi-channel process display
M0E-1002-0-B2-0K0-N40-1-1-1-1-000	
PVC-Kabel	
785-4000-1-1-3-N01-Z00-1-1-1-000	
18.601G-1600-R-1-8-100-200-1-000	
18.605-2500-B-1-5-1-006-300-1-000	
780-V163-1-2-2-N01-100-1-000	Electronic pressure switch DS 200
780-V323-1-2-2-N01-100-1-000	pressure switch DS 200
780-V602-1-2-2-N01-100-1-000	pressure switch DS 200
DAkKS	calibration certificate
DMK 458 59B-D290-1-2-TR1-F23-1-8-2-010	Pressure Transmitter
LMK 307 (380-6000-1-2-1-1-5-1-020-000)	Submersible probe
DS 201 782-1002-0-1-5-100-N00-1-1-2-000	pressure switch
590-6001-1-5-G10-100-1-K-2-000	Pressure Transmitter
590-1002-1-5-G10-100-1-K-2-000	
380-1001-1-2-1-1-5-1-020-000	Plunge probe
DMP 331 (110-6001-3-3-M10-300-1-000)	
DMP 457 (600-1602-E-3-TR3-100-1-000)	Pressure Transmitters
110-M160-3-5-100-300-1-000	Pressure Transmitter DMP 331
140-1004-E-2-M10-D28-2-000	Transducer
LMP 307 (451-2500-1-1-1-1-5-1-005-000)	Stainless steel immersion probe

Product	Description
UPA2-600b/420/G1/2	
LMK 307 381-1001-1-2-1-1-5-1-015-000	HYDROSTATIC LEVEL SENSOR
DS 201 (782-4003-E-2-5-N01-100-5-1-2-000)	Electronic pressure switch DS 201
680-6001-1-0-Q00-Q00-5-013-000	OEM electronic pushbutton switch DS 4
26.600 G-1003-R-3-5-100-200-1-000	Pressure Transmitters
110-S102-1-3-100-100-7-000	Sensor
DMK 331, Code: 250-V252-1-5-100-F00-1-1-2-000	Industrial Pressure transmitter
26.600 G-2502-R-1-5-100-300-1-000	Pressure Transmitter 26.600G
26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-10 BAR)	
26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-16 BAR)	
26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-40 BAR)	
26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-60 BAR)	
26.600 GJS21-R-1-8-100-N40-1-000	OEM pressure transmitter 26.600 G
LMK 458	plunge probe
DMK 458	pressure transmitter
TPE-U-CABLE	
LMK 351 471-6000-1-3-100-M00-1-1-2-000	Sensor
26.600 G-V502-R-1-5-M20-400-1-000	OEM pressure transmitter 26,600G
LMP 331, Code: 431-2500-1-1-3-1-100-3-000	Screw-in probe
DMK 331 250-1602-3-5-M00-H00-1-B-2-000	Industrial Pressure Transmitter
DMP 331-110-1002-1-3-100-100-1-000	Pressure transmitter
DMP 331 Code:110-1601-1-1-100-300-1-000	Pressure Sensor
DMP331 Code 110-1002-E-3-M00-100-5-000	
18601G, Code 1601-R-1-5-100-300-3-000	
LMK 487 (366-1000-1-1-C-1-7-4-3-003-502)	stainless steel plunge probe
DM01-A21	display for digital pressure gauge DM 01
26.600 G-V252-R-1-5-100-300-1-000	Pressure transmitter (Normal)
500-6001-1S-3-M10-C62-1-0-2-000	pressure transmitter
380-6001-1-2-1-1-5-3-010-000	stainless steel plunge probe
110-6002-3-2-100-100-1-000	Pressure transmitter DMP 331
250-6002-3-5-100-100-1-1-2-000	Pressure transmitter DMK 331
18.601G-1001-A-3-5-100-100-1-000	OEM pressure transmitter
DMP 331 (110-6001-3-3-100-100-1-000)	pressure transmitter
26.600 G-6001-R-1-5-100-200-1-000	Pressure transmitter
18.601G-2501-R-1-5-100-200-1-000	Pressure transmitter
LMP 305 (400-4000-1-1-1-1-5-1-020-000)	Probe
DS200 780-4003-E-1-3-N01-100-1-000	pressure switch
DMP331-110-2001-1-2-100-100-1-000	Pressure transmitter
DMP331i-110-2001-1-1-100-100-1-111	Pressure transmitter
DMP331i-110-S100-1-1-100-100-1-111	Pressure transmitter
18.601G-2500-R-1-5-100-300-1-000	Pressure transmitter
LMP307-450-4000-1-1-1-1-5-1-030-000	Submersible probe
46.608-4002-2-TR0-000	Pressure transmitter
250-1002-3-5-M10-F00-1-1-2-000	pressure transmitter
780-1602-E-1-3-N11-100-1-070	pressure switch

Product	Description
780-1003-E-1-3-N11-100-1-070	pressure switch
780-4003-E-1-3-N11-100-1-070	pressure switch
500-V402-1S-3-M10-M76-1-0-2-000	pressure transmitter
600-1602-1-3-G10-100-1-000	pressure transmitter
LMK307 381-4000-1-2-1-1-5-1-010-000	Stainless steel immersion probe
110-2502-3-3-100-C00-1-006	pressure transmitter
110-6001-E-3-100-C00-1-006	pressure transmitter
DMP 333 130-1003-1-3-100-100-5-000	
110-V402-1-3-M10-300-3-000	
26.600G-Z102-R-1-8-100-200-1-000	OEM pressure transmitter
17.600 G-1002-R-1-5-100-300-Q-070	OEM pressure transmitter
110-2500-1-5-100-100-1-000	pressure transmitter dmp 331
110-1000-1-5-100-100-1-000	pressure transmitter dmp 331
111-1002-3-3-M10-300-1-000	pressure transmitter
P/N: 110-2502-E-3-100-C00-1-006, Type: DMP 331	Transmitter
18.601G	OEM pressure transmitter
17.600 G-4003-R-3-5-100-300-P-000	OEM pressure transmitter
DMP 343 100-2500-E-3-100-200-1-000	Pressure transmitters
DMP 331 110-6001-3-3-M00-300-1-000	Pressure transmitter
LMK307-381-1001-1-2-1-1-5-3-065-000	Stainless steel immersion probe
DMP 331P Code: 501-1601-1-3-100-Z00-1-1-1-200	Pressure transmitter
LMK 307 381-1001-1-2-1-1-5-3-035-000	
DMK 458 59A-2500-E-2-G10-200-1-8-2-000	Pressure transmitters
EPS200G14SP12	Pressure sensor
DMP 333 130-6003-1-2-100-500-1-000	
26.600G-V502-R-1-5-100-300-1-000	OEM-Pressure transmitter
DMP 331 110-1001-E-3-100-F00-1-000	pressure transmitter
26.600 G-1002-R-1-5-M20-300-1-000	OEM pressure transmitter
P/N: 110-LS03-E-3-100-N00-1-000, Type: DMP 331	Pressure transmitters
P/N: 110-1002-E-3-100-C00-1-006, Type: DMP 331	Pressure transmitters
P/N: 110-6001-E-3-100-C00-1-006, Type: DMP 331	Pressure transmitters
P/N: 602-6002-1-3-G10-100-1-000, Type: DMP 457	Pressure transmitters
P/N: 110-2500-1-5-100-100-1-000, Type: DMP 331	Pressure transmitters
17.600 G-6001-R-1-B5-100-N40-2-000	Pressure transmitters
P/N: 450-1001-1-1-1-1-3-1-010-000, Type: LMP 307	submersible probe
P/N: 566-6000-1-2-1-1-1-3-010-000, Type: LMK 382	submersible probe
P/N: 111-1002-1-3-100-100-1-000, Type: DMP 331	Pressure transmitters
Code: 381-4000-1-2-3-1-5-1-005-000	
115-6002-3-1-100-300-1-000	
DMP 331 110-1000-1-5-100-200-1-000	Pressure transmitters
P/N: 130-2503-1-3-100-100-1-000, Type: DMP 333	Pressure transmitters
M0K-1003-0-B1-100-1-000	Precision digital pressure gauges
DMP 457 Code: 600-1602-E-3-TR3-300-1-000	pressure transmitter
500-6001-1-3-100-Z00-1-1-2-000	pressure transmitter DMP 331P
111-1602-1-3-M10-N40-1-000	pressure transmitter DMP 331

Product	Description
111-6001-1S-3-M10-N40-1-000	pressure transmitter DMP 331
LMK 809	submersible probe
M00-1002-0-B5-0K0-200-1-1-2-1-000	digital pressure gauge
M0K-2502-0-B1-100-1-000	Pressure transmitter for digital pressure gauge DM 01
M0K-6000-0-B1-100-1-000	Pressure transmitter for digital pressure gauge DM 01
501-1002-1-3-100-C61-1-0-2-205 Type DMP 331P	pressure transmitter
DS200 781-1001-7J-1-3-N11-100-1-000	electronic pressure switch
LMP 307 // 307-451-1600-1-1-E-1-5-3-070-000	stainless steel immersion probe
DMP 321	Pressure transmitter
26.600 G-1002-R-1-8-100-300-1-000	OEM pressure transmitter
Code: 251-2001-1-5-M10-300-1-1-2-000 Type DMK 331	Pressure transmitter
815-0016-3Z-0-G-0-N-Y00-M-000	Differential pressure transducer
Type DMP 331i Code: 110-1002-1-1-M10-200-2-111	Pressure transducer
59A-1602-E-2-TR3-H00-1-8-2-000	Pressure transmitter
DS 210 78A-M250-7-1-3-N01-300-1-000	pressure switch
DMP 331 110-M200-1-5-100-300-1-000	Pressure transmitter
DMP331 / 110-V202-1-3-100-100-1-000	PRESSURE TRANSMITTER
DMP343 100-0500-3-5-100-300-1-000	Pressure transmitter
110-6000-E-1-100-F00-1-000	liquid level probe
AX14-DS 201 /782-4003-E-2-5-N01-N00-5-1-2-000	
111-1002-E-3-850-N00-1-000	
111-1002-E-3-880-N00-1-000	pressure transmitter
590-V602-E-5-TS3-Z36-1-K-2-000	Pressure transmitter
441-6000-1-1-1-1-1-5-020-000	stainless steel submersible probe
26.600G-1003-R-3-5-TM0-300-1-000 (OEM)	Pressure transmitter
LMP331 430-0600-1-1-1-1 100-8-000	pressure sensor
18.600G-M250-R-1-5-100-300-1-000	Pressure Transmitter
DMK33112	Industrial pressure transmitter
600-V502-1-3-G10-100-1-000	Pressure transmitter
600-6001-1-3-G10-100-1-000	Pressure transmitter
600-4001-1-3-G10-100-1-000	Pressure transmitter
600-4002-1-3-G10-100-1-000	Pressure transmitter
500-1002-1-2-100-C61-1-0-1-000	Pressure transmitter
450-4000-1-1-1-1-3-1-005-000	level probe
110-6001-1-3-M10-F00-1-000	Pressure transmitter
110-1602-1-3-100-F00-1-000	Pressure transmitter
110-1602-1-3-M10-F00-1-000	Pressure transmitter
110-6002-1-3-100-F00-1-000	Pressure transmitter
DMP 331 110-2502-E-1-850-100-1-000	Pressure sensor
18.601G-0500-R-3-8-100-300-1-000	Pressure probe
18.601G-0500-R-3-8-M20-400-1-000	Pressure probe
DMP331 110-2500-2-5-100-1-006 (U)	pressure sensor
DMP331 / 111-1001-3-3-100-100-1-000	Pressure transmitter
DMP321-115-4003-1 -2-100-N40-1-000	Pressure sensor
18.605G-2500-B-1-5-1-006-300-1-000	OEM submersible pressure transmitter

Product	Description
DMP331i 110-9999-3-1-100-300-1-111	Pressure sensor
DMK 457 590-1602-E-5-TS3-Z36-1-K-2-000	Pressure sensor
Code 500-5001-1-3-100-C62-1-0-2-000 Type DMP 331P	Pressure transmitter
DMP 331 / 110-1600-1-5-TAO-100-1-000	Sensor
Code 330-0600-1-8-M10-Q00-6-000 Type DMD 341	Differential pressure transmitter
Code: 110-6000-E-1-100-F00-1-000 Type DX19-DMP 331	Pressure transmitter
591-2501-1-5-TT3-H00-1-1-2-000	Pressure transmitter
591-1601-1-5-TT3-H00-1-1-2-000	Pressure transmitter
18.605G / 18.605-6000-M-1-5-1-009-300-1-000	Pressure transmitter
590-2502-1-5-TT3-N00-1-1-2-000	
DMP331 110-1602-1-3-100-F00-1-000	Pressure sensor
DMP331 110-1602-1-3-M10-F00-1-000	Pressure sensor
CIT 400 PH0-F-2-E-6-B-000	display
26.600G-1002-R-1-5-100-300-1-000 (G1/4")	Pressure transmitter
PH0-F-2-E-6-N-000	Process display
DMP 333 130 2503 1 5 100 200 1 000	Pressure Transmitter
DMP 331 110 4002 1 5 100 200 1 000	Pressure Transmitter
DMP 331 110 4001 1 5 100 200 1 000	Pressure Transmitter
DMP 331 110 1002 E 5 100 200 1000	Pressure Transmitter
DMP 333 / 130 4003 E 3 100 200 1 000	pressure transducer
DMP 333 130 7003 E 3 100 200 1 000	Pressure Transmitter
DMP 333 / 130 1003 E 3 100 200 1 000	pressure transducer
DMD 331 Code: 110-2502-E-3-100-C00-1-006	
DMP 331P 500-6001-1S-3-M10-C52	Pressure transmitter
250-4000-1-5-M10-H00-1-B-2-0	Pressure transmitter
250-4000-1-5-M10-H00-1-B-2-000	Pressure transmitter
30.600G-1002-R-1-8-100-N40-2-1-000	
LMP331-431-2500-1-1-1-1-100-5-000	Pressure sensor
LPM 331 (431-2500-1-1-1-3-100-5-000)	Screw-in probe
26.600 G-6002-R-1-5-TM0-N40-1-000	Pressure Transmitter
26.600 G-2502-R-1-5-TM0-N40-1-000	pressure transmitter
LMP 307 451-2502-1-1-1-1-1 200-000	
18-605G-6000-M-1-5-1-012-300-1-000	Pressure transmitter
17.600 G-6003-R-3-5-100-300-P-070	
460-6001-1-5-M10-K00-3-1-2-000	
460-1002-1-5-M10-K00-3-1-2-000	
DMP 320 -11C-1003-7-1-100-100-1-000	Pressure sensor
DX14-LMK 351 470-D736-E-3-M10-M00-1-1-2-000	Screw-in probe
30.600G-1003-R-1-8-100-300-2-1-000	Pressure transducer
30.600G-1603-R-1-8-100-300-2-1-000	Pressure transducer
26.600 G-1003-R-1-5-100-300-1-000	
26.600 G-1603-R-1-5-100-300-1-000	
DMP343 100-d220-1-3-100-100-1-000	Industrial Pressure transmitter
LMK358-446-1001-1-2-H-1-2-1-015-000	
391-1601A-2-1-1-5-1-020-000	Submersible probe

Product	Description
30.600 G-2502-R-1-8-100-300-2-1-000	
100-0400-1-5-100-100-1-000	pressure transducer
G-D025-R-1-5-100-H00-1-582	OEM pressure transmitter
18.605G-1001-M-1-5-1-006-300-1-000	OEM pressure transmitter
766-1601-1-3-2-1-1-4-2-003-000	Level probe
766-4000-1-3-2-1-1-4-2-015-000	Level probe
LMK 458 4000-1-3-2-1-1-4-2-015-000	
LMK 458 766-1601-1-3-2-1-1-4-2-003-000	
DX19-DMP 457 / 602-WS03-E-5-TR3-200-1-000	pressure transducer
DMP 333 / 130-2503-E-3-100-200-1-000	pressure transducer
DMP 331 / 110-4002-E-3-100-200-1-000	pressure transducer
DMP 331 / 110-4001-E-3-100-200-1-000	pressure transducer
DMP 331 / 110-1002-E-3-100-200-1-000	pressure transducer
DMP 334 / 140-7003-E-3-100-200-2-000	pressure transducer
250-1601-ES-5-M10-N40-1-1-2-000	DMK 331 pressure transmitter
430-D172-1-1-1-1-M10-3-000	
LMK351 / 470-4001-1-3-TA0-M00-1-B-2-000	screw-in probe
M00-1002-0-B5-0K0-200-1-1-2-N-000	digital pressure gauge
DMP 331 / 110-1002-1S-3-M10-100-1-000	
17.600 G-1002-R-1-5-M20-400-2-000	17.600G OEM Pressure Transmitter
LMK 358H / 446-1501-1-2-H-1-2-1-040-000	LMK 358H stainless steel submersible probe
DS200 // 780-1603-1-1-3-N01-N00-1-000	Electronic Pressure Switch
LMK 358H (446-1501-1-2-H-1-0-1-000-000	
DMP336-215-1603-1-5-M10-200-2-007	
DMK 457-590-2503-1-5-TS3-100-1-K-2-000	Pressure Transmitter
TPE-U-Kabel	
DMK 351P / Code: 295-V902-1-3-M10-C62-7-1-2-000	Sensor
DMP 343 code: 100-0400-1-100-100-000	
dmp331 110-4001-1-5-100-500-1-000	sensors
17.600G	
M00-1001-0-B5-0K0-200-1-1-2-1-000	BAROLI 05 digital pressure gauge
780-4003-E-2-3-N11-100-1-070	pressure switch
500-1602-E-3-100-Z00-1-1-1-000	
130-4003-E-3-100-100-5-000	
450-6000-1-1-1-1-3-1-010-000	Level probe
DMP 331 110-4001-1-3-100-100-3-000	
DMP 331 110-1000-E-5-100-200-2-000	
DMP 331 110-1002-E-3-100-100-1-000	
DMK 351 290-1000-E-3-100-100-1-1-2-007	
600-V502-E-3-G10-100-1-000	Pressure Transmitter
DC7-2501-L5-2-N11-N40-1-000	
500-1002-1-2-100-Z00-1-1-1-000	Pressure sensor
DS 200 780-4003-1-1-3-100-200-1-070	electronic pressure switch
DMK 331 / 250-2501-1-5-100-H00-1-B-2-000	Pressure transmitter
LMP 331 / 430-JS49-1-1-E-1-E00-5-818	screw-in probe

Product	Description
DMP 331 P / 501-6001-1-3-100-C61-1-0-2-205	Pressure transmitter
DMP331-110-S102-1-3-100-200-1-000	sensor
26.600 G-X102-R-1-8-100-1-000	
780-4003-1-1-3-100-300-1-070	
130-1003-E-3-850-N40-5-000 / DMP 333	Pressure transmitter
Code: M0E-2500-0-B2-0K0-N00-1-1-1-1-000	manometer
100-6000-1-3-100-100-1-000	DMP 343 Pressure Transmitter
DMP 343 100-6000-1-3-100-200-1-000	
110-1001-1-2-M10-F00-1-000	Pressure transmitter
DMP 343 100-0400-1-3-N00-1-000	
590-1002-E-5-G10-100-1-K-2-000	Pressure transmitter
LMP 331/ 430-1000-1-1-1-1-100-1-000	screw-in probe
DMP331-111-2001-7-3-TA0-30 0-1-000	
366-2500-1-1-C-1-1-4-3-003-000	LMK 487 stainless steel submersible probe
LMK 382/566-1600-1-2-1-1-2-3-005-000	
100-D265-1-5-100-100-1-000	
DCT 533-DC2-4000-IO-5M17-200-2-000	Pressure Transmitter
LMK 358 / 446-1601-1-2-1-1-2-3-020-000	Separable stainless steel submersible probe
KL 2 / KL 2-ZB.601-201-000	terminal housing
DMK 331 250-4000-1-5-100-H00-1-B-2-000	Pressure transmitter
470-2500-1-3-M10-M00-1-B-2-000	
DMK 331P / 505-6003-E-5-100-Z00-1-1-1-000	Pressure transmitter
110-D558-E-5-100-N00-1-000	
110-S050-E-5-100-N00-1-000	
DS201-782-1002-0-1-5-100-H00-3-B-2-000	low pressure switch
566-1001-1-2-E-1-2-3-010-000	Level Sensor
768-D291-1-1-3-2-1-1-4-2-003-000	
601-D049-1-3-TR3-F00-1-000	
601-D290-1-3-TR3-F00-1-000	
DMP 331 / 110-M400-1-1-100-300-1-000	
DMP 331 / 110-4000-1-1-100-300-1-000	
Measurement report 11 points/3 cycles	
601-D049-E-3-TR3-H00-3-000	Pressure transmitter
DMP343 100-0100-1-5-100-N40-1-000	Industrial Pressure Transmitter
Type DMK 457 Code 592-6980-1-5-TR3-100-1-1-2-000	Pressure transmitter
Type DMK 457 Code 592-6450-1-5-TR3-100-1-1-2-000	Pressure transmitter
600-1602-E-3-G10-100-1-000	Pressure transmitter
Type DMK 457 Code 592-2501-1-5-TT33-100-1-1-2-000	Pressure transmitter
DMK387-285-2000-1-3-100-L00-1-B-C-000	
LMK 351 Code: 470-0600-3-3-100-M00-3-B-C-000	
LMK 307 / 380-6000-1-2-1-1-5-1-015-000	stainless steel submersible probe
46.607-4002-2-TR0-000	Pressure transmitter
XMP i / 511-2002-A0-H-1-AK0-200-1-1-1-000	precision pressure transmitter
DMK 331 250-6002-3-5-100-100-1-1-2-000	Pressure transmitter
110-2502-E-3-100-F00-1-00	Transmitter

Product	Description
18 605G 6000 M 1 5 1 009 300 1 000	probe
DMK 331 / 250-4001-1-5-100-100-1-1-2-000	pressure sensor
LMP 307-451-4000-1-1-1-1-5-1 -003-00R	
381-6000-1-2-1-1-5-1-010-000	Hydrostatic level
600-3000-1-5-TR3-F00-1-000	sensor
YLMP307212TR	
340-2501-1-A0-H-17-AK0-N56-1-1-1-000	XMD differential pressure transmitter
381-4000-1-2-1-1-5-1-006-000	
600-4000-1-3-G10-100-1-000	
100-0100-1-5-M10-300-1-000 // DMP343	pressure transmitter
DMD 331// 730-E-4001-1-8-100-200-1-000	differential pressure transmitter
DMP 331P (501-2501-3-3-TA0-Z00-1-7-1-200)	Pressure transmitter
DMD 331-730-F-1000-E-5-100-J00-1-000	
LMK351-471-2500-1-3-100-M00-1-1-2-000	Screw-in Transmitter
592-9740-1-5-TR3-100-1-K-2-000	PRESURE MEASUREMENT
59C-9740-1-2-TR3-H00-1-K-2-000	PRESURE MEASUREMENT
59C-6550-1-2-TR3-100-1-8-2-000	PRESURE MEASUREMENT
DMK 458-59C-9740-1-2-TR3-H00-1-K-2-000	
DMK 458-59C-6550-1-2-TR3-100-1-8-2-000	
26.600 G-1602-R-3-5-100-300-1-000	
DMK 331P / 505-1603-1-5-200-Z00-1-1-1-200	pressure transmitter