



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Celesco

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">9603872-0400</a>	Cable kit
<a href="#">MT2A-15E-9-10K-M2</a>	
<a href="#">MT2A-30E-33-10K-S</a>	Cable Actuated Position Sensor
<a href="#">PT101-0025-111-1110</a>	transducer
<a href="#">PT101-0050-111-1110</a>	
<a href="#">PT101-0100-111-1140</a>	sensor
<a href="#">PT1A-40-FR-10K-M6-632330A</a>	Pos.Sens.0,92884mV / V / mm
<a href="#">PT1A-50-UP-10k-M6</a>	Cable Actuated Sensor
<a href="#">PT1MA-15-BK-420E-C25</a>	Transducer
<a href="#">PT8420</a>	transductor
<a href="#">PT9420-1700-114-1630</a>	
<a href="#">RT9420-0010-221-1110</a>	potentiometer
<a href="#">RT9420-0R50-221-1110</a>	potentiometer
<a href="#">SPD-25-3</a>	sensor
<a href="#">SR1V-125</a>	
<a href="#">RT8420-0020-142-115</a>	Drehgeber
<a href="#">RBS9420-0400-111-1110</a>	Seilzug mit spez. Staubabstreifer für
<a href="#">PT1MA-20-BK-420E-C25</a>	Seilzugwegaufnehmer
<a href="#">PT9600-0450-422-S02</a>	Cable-Extension Position Transducer
<a href="#">PT8600-0025-111-GPI-632847C (OEM)</a>	Encoder
<a href="#">PT1MA-20-UP-420E-C25</a>	
<a href="#">M150-4-H1-E-5K-C1</a>	
<a href="#">632686 RevA</a>	Sensor
<a href="#">PT1MA-20-UP-420E-M6</a>	Cable-Extension Position Transducer
<a href="#">VLS-RBS9420-0400-121-1140S</a>	
<a href="#">SP2-4</a>	
<a href="#">PT5A-80-S47-FR-10K-M6</a>	Cable-Extension Position Transducer
<a href="#">MTA-3E-5KC</a>	
<a href="#">MTA-5E-5KC</a>	Seilzugsensor
<a href="#">PT9420-0150-111-1110</a>	
<a href="#">PT420-0020-111-1110</a>	Instrument Grade
<a href="#">PT8101-0040-811-4113</a>	Voltage Divider (Potentiometric)
<a href="#">9085000-0033</a>	
<a href="#">PT1MA-50-UP-420E-MC4-SG</a>	
<a href="#">PTX101-0040-111-3100</a>	
<a href="#">PT5DC-60-V62-BK-Z10-M6M</a>	

Product	Description
<a href="#">PT101-0010-111-1110</a>	Linear Position Sensor
<a href="#">PT8101-0015-121-1113</a>	
<a href="#">MT2A-9E-33-10K-M2A</a>	Sensor
<a href="#">MT2E-30E-33-316-C2</a>	Cable Actuated Sensor
<a href="#">PT9420-0500-211-1110</a>	Sensor
<a href="#">RT9420-0R50-111-1110</a>	
<a href="#">RT9420-0001-111-1110</a>	
<a href="#">RT9420-0003-111-1110</a>	
<a href="#">RT9420-0020-111-1110</a>	
<a href="#">RT9420-0R50-121-1110</a>	Pulley sensor
<a href="#">RT9420-0001-121-1110</a>	Potentiometer
<a href="#">RT9420-0002-121-1110</a>	
<a href="#">RT9420-0003-121-1110</a>	Absolute encoder
<a href="#">RT9420-0005-121-1110</a>	
<a href="#">RT9420-0010-121-1110</a>	
<a href="#">RT9420-0020-121-1110</a>	ROTATIONAL TRANSDUCER
<a href="#">RT9420-0R25-141-1110</a>	Rotary Potentiometer
<a href="#">RT9420-0020-141-1110</a>	position transducers
<a href="#">RT9420-0R25-111-1210</a>	
<a href="#">RT9420-0010-111-1120</a>	
<a href="#">RT9420-0020-111-1120</a>	
<a href="#">RT9420-0050-111-1120</a>	
<a href="#">RT9420-0R25-121-1120</a>	sensor
<a href="#">RT9420-0030-121-1120</a>	
<a href="#">RT9420-0010-131-1120</a>	
<a href="#">RT9420-0003-121-1220</a>	
<a href="#">RT9420-0020-141-1220</a>	
<a href="#">RT9420-0R25-111-1130</a>	Potentiometer
<a href="#">RT9420-0R50-111-1130</a>	Rotational Position Sensor
<a href="#">RT9420-0002-121-1130</a>	ENCODER
<a href="#">RT9420-0005-121-1130</a>	angle of rotation sensor
<a href="#">RT9420-0010-121-1130</a>	cable displacement transducer
<a href="#">RT9420-0R50-221-1130</a>	Angular transducer
<a href="#">RT9420-0005-221-1130</a>	
<a href="#">RT9420-0002-141-1130</a>	rotation position sensor
<a href="#">RT9420-0R50-121-1230</a>	Rotation Position Sensor
<a href="#">RT9420-0R50-241-1230</a>	Rotation Position Sensor
<a href="#">RT9420-0050-111-1430</a>	Rotation Position Sensor
<a href="#">RT9420-0010-221-1530</a>	angle sensor
<a href="#">RT9420-0030-221-1530</a>	cable displacement transducer
<a href="#">RT9420-0R50-111-1140</a>	Rotation Position Sensor
<a href="#">RT9420-0001-111-1140</a>	
<a href="#">RT9420-0050-111-1140</a>	
<a href="#">RT9420-0001-131-1140</a>	
<a href="#">RT9420-0050-231-1140</a>	

Product	Description
<a href="#">RT9420-0005-221-1150</a>	
<a href="#">RT9420-0R50-241-1150</a>	
<a href="#">RT9420-0005-221-1360</a>	
<a href="#">RT9420-0R50-111-1170</a>	
<a href="#">RT8420-0030-241-1140</a>	
<a href="#">PT1MA-50-FR-420E-MC4</a>	TRANSDUCER
<a href="#">PT1DC-10-UP-Z10-M6</a>	TRANSDUCER
<a href="#">PT1A-25-FR-5K-C25-SG</a>	TRANSDUCER
<a href="#">MTA-3L-5KC-MB</a>	TRANS
<a href="#">MT3A-30E-33-10K-C2A</a>	TRANSDUCER
<a href="#">CLWG-100-MC4</a>	TRANSDUCER
<a href="#">CLWG-500-NC4</a>	TRANSDUCER
<a href="#">CLWG-300-SC4</a>	LINEAR POTENTIOMETER
<a href="#">CLWG-225-NC4</a>	LINEAR TRANSDUC
<a href="#">CLWG-225-MC4</a>	
<a href="#">SR1M-125</a>	wire transducers
<a href="#">SR1A-125</a>	Transducer
<a href="#">SP3-50</a>	Cable path transducers
<a href="#">SP3-25</a>	Cable path transducers
<a href="#">SP3-12</a>	Cable path transducers
<a href="#">SP2-12</a>	compact string pot
<a href="#">SP1-50</a>	TRANSDUCER
<a href="#">SP1-12</a>	TRANSDUCER
<a href="#">SE1-50</a>	TRANSDUCER
<a href="#">SE1-25</a>	
<a href="#">RBS9600-0350-214-F01</a>	TRANSDUCER
<a href="#">PTX101-0060-111-2100</a>	TRANSDUCER
<a href="#">PT9600-0500-221-S01</a>	Sensor
<a href="#">PT9510-0200-111-1110 / 18639</a>	Pulling position transducer
<a href="#">PT9420-0300-112-1130</a>	TRANSDUCER
<a href="#">PT9420-0250-311-1120</a>	TRANSDUCER
<a href="#">PT9420-0200-122-1110</a>	POSITN. TRANSDUCER
<a href="#">PT9420-0150-121-1110</a>	TRANSDUCER
<a href="#">PT9420-0100-122-1110</a>	TRANSDUCER
<a href="#">PT9420-0100-112-1130</a>	TRANSDUCER
<a href="#">PT9420-0075-112-1130</a>	cable displacement transducer
<a href="#">PT9301-0250-111-2130</a>	TRANSDUCER
<a href="#">PT9150-0300-111-1110</a>	
<a href="#">PT8600-0060-211-F01</a>	Encoder
<a href="#">PT8600-0050-111-S02</a>	TRANSDUCER
<a href="#">PT8600-0050-111-F01</a>	TRANSDUCER
<a href="#">PT8510-0030-121-1110</a>	TRANSDUCER
<a href="#">PT8510-0030-111-1110</a>	Cable-Extension Position Transducer
<a href="#">PT8510-0020-121-1110</a>	
<a href="#">PT8420-0060-811-1130</a>	TRANSDUCER

Product	Description
<a href="#">PT8420-0060-711-1133</a>	TRANSDUCER
<a href="#">PT8420-0060-611-1113</a>	TRANSDUCER
<a href="#">PT8420-0060-411-1123</a>	TRANSDUCER
<a href="#">PT8420-0060-111-1110</a>	TRANSDUCER
<a href="#">PT8420-0050-111-1110</a>	.
<a href="#">PT8420-0040-111-1110</a>	TRANSDUCER
<a href="#">PT8420-0030-121-1110</a>	cable path sensor
<a href="#">PT8420-0025-0321-1110</a>	TRANSDUCER
<a href="#">PT8420-0020-121-1120</a>	
<a href="#">PT8420-0015-121-1131</a>	
<a href="#">PT8150-0030-111-1110</a>	TRANSDUCER
<a href="#">PT8150-0025-121-3110</a>	Linear Transducer
<a href="#">PT8101-0030-121-1110</a>	TRANSDUCER
<a href="#">PT8101-0010-111-1110</a>	TRANSDUCER
<a href="#">PT5MA-80-S47-FR-420E-M6M</a>	TRANSDUCER
<a href="#">PT5MA-60-S47-FR-420E-M6M</a>	TRANSDUCER
<a href="#">PT5MA-50-S47-FR-420E-M6</a>	TRANSDUCER
<a href="#">PT5MA-0200-N34-FR-420E-M6M</a>	
<a href="#">PT5MA-150-S47-FR420E-M6M</a>	
<a href="#">PT5MA-100-S47-UP-420E-M6</a>	Encoder
<a href="#">PT5MA-100-S47-DN420E-M6M</a>	TRANSDUCER
<a href="#">PT5DC-80-7-UP-Z10-M6M</a>	
<a href="#">PT5DC-200-N34-BK-Z10-M6</a>	TRANSDUCER
<a href="#">PT5A-80-S47-DN-10K-M6M</a>	TRANSDUCER
<a href="#">PT510-0040-111-1110</a>	Transducer
<a href="#">PT420-0100-111-1110</a>	Transducer
<a href="#">PT420-0040-111-1210</a>	TRANSDUCER
<a href="#">PT1MA-50-FR-420E-C25</a>	TRANSDUCER
<a href="#">PT1MA-40-UP-420R-C25-SG</a>	TRANSDUCER
<a href="#">PT1MA-30-UP-420E-M6</a>	TRANSDUCER
<a href="#">PT1MA-20-UP-420E-M6-SG</a>	TRANSDUCER
<a href="#">PT1MA-15-UP-420E-MC4</a>	
<a href="#">PT1MA-10-UP-420E-MC4</a>	
<a href="#">PT1MA-10-UP-420E-M6</a>	Wire potentiometer
<a href="#">PT1DN-50-UP-125-NR</a>	TRANSDUCER
<a href="#">PT1DC-50-UP-Z10-M6</a>	TRANSDUCER
<a href="#">PT1A-40-UP-10K-C25</a>	TRANSDUCER
<a href="#">PT1A-30-UP-5K-MC4</a>	Sensor
<a href="#">PT1232-50-UP-C25-SG</a>	
<a href="#">PT101-0060-111-1110</a>	
<a href="#">PT101-0050-111-4120</a>	TRANSDUCER
<a href="#">PT101-0025-111-4110</a>	TRANSDUCER
<a href="#">PT101-0020-111-3110</a>	TRANSDUCER
<a href="#">PT101-0015-111-1110</a>	TRANSDUCER
<a href="#">MTA-5AE-5KC-MB</a>	voltage divider output

Product	Description
<a href="#">MTA-3AL-5KC-MB / 13126</a>	cable displacement transducer
<a href="#">MTA-3AE-5KC-MB</a>	.
<a href="#">MT2A-30E-33-10K-C1</a>	TRANSDUCER
<a href="#">ELPM75</a>	
<a href="#">ELPM 150</a>	Sensor
<a href="#">MLP-100</a>	Linear Potentiometer
<a href="#">M150-4-H2-L-5K-C1</a>	sensor
<a href="#">CLWG-750-SC4</a>	
<a href="#">CLWG-600-NC4</a>	TRANSDUCER
<a href="#">CLWG-450-NC4</a>	TRANSDUCER
<a href="#">CLWG150 MC4</a>	
<a href="#">CLP-50</a>	TRANSDUCER
<a href="#">CLP-150</a>	
<a href="#">9678828-0000</a>	
<a href="#">633056</a>	TRANSDUCER
<a href="#">631897</a>	TRANSDUCER
<a href="#">SPD-12-3</a>	Draw Wire
<a href="#">SP2-25</a>	cable displacement transducer
<a href="#">SGD-120-3</a>	
<a href="#">CLWG600</a>	
<a href="#">9677810-0000</a>	PART
<a href="#">9676792-0000</a>	CABLE GUIDE
<a href="#">9676563-0000</a>	PART
<a href="#">9676498-0000</a>	PART
<a href="#">9650649-1000</a>	transducer
<a href="#">9610035-0000</a>	
<a href="#">9610021-0000</a>	Winding Tool
<a href="#">9603859-0500</a>	PART
<a href="#">9603859-0400</a>	CABLE KIT
<a href="#">961-098-000</a>	CABLE KIT
<a href="#">9603854-0040</a>	
<a href="#">9603846-0005</a>	SPOOL
<a href="#">9603846-0003</a>	
<a href="#">9603816-0060</a>	CABLE KIT
<a href="#">9603816-0050</a>	CABLE KIT
<a href="#">9603803-0400</a>	CABLE KIT
<a href="#">9603755-0050</a>	CABLE ASSEMBLY
<a href="#">9603513-0024</a>	CABLE
<a href="#">9085000-0004</a>	
<a href="#">9085000-0003</a>	potentiometer
<a href="#">9085000-0002</a>	POT
<a href="#">9036810-0041</a>	CONN PLUG
<a href="#">9036810-0040</a>	Cordset
<a href="#">9015010-0010</a>	PART
<a href="#">9011264-4404</a>	PART

Product	Description
<a href="#">9000400-0143</a>	PART
<a href="#">SR1M-175</a>	
<a href="#">SPD-50-3</a>	
<a href="#">SM2-25</a>	
<a href="#">PT9420-0100-121-1230</a>	
<a href="#">PT9420-0075-112-1310</a>	transducers
<a href="#">IT9420-060-000-1540</a>	INCLINOMETER
<a href="#">CLWG-600-SC4</a>	Linear Potentiometer
<a href="#">9603803-0550</a>	
<a href="#">SM2-7</a>	TRANSDUCER
<a href="#">SM2-12</a>	TRANSDUCER
<a href="#">RT8420-R125-232-1120</a>	
<a href="#">RBS9420-0250-121-1330</a>	TRANSDUCER
<a href="#">PT9510-0075-122-1110</a>	TRANSDUCER
<a href="#">PT9420-0450-121-1130</a>	TRANSDUCER
<a href="#">PT9420-0400-111-1110</a>	TRANSDUCER
<a href="#">PT9420-0350-122-1130</a>	Transducer
<a href="#">PT9420-0300-111-1570</a>	TRANSDUCER
<a href="#">PT9420-0250-221-1160</a>	ENCODER
<a href="#">PT9420-0200-124-1110</a>	TRANSDUCER
<a href="#">PT9420-0100-111-1110</a>	
<a href="#">PT9420-0075-111-1110</a>	TRANSDUCER
<a href="#">PT8420-0030-311-1120</a>	TRANSDUCER
<a href="#">PT8420-0015-321-1120</a>	
<a href="#">PT8420-0010-111-1120</a>	TRAN
<a href="#">PT8101-0060-311-4130</a>	TRANSDUCER
<a href="#">PT8101-0060-111-4110</a>	
<a href="#">PT5A-80-S47-UP-5K-M6</a>	
<a href="#">PT5A-60-S47-FR-10K-M6</a>	TRANSDUCER
<a href="#">PT5A-150-S47-FR-10K-M6</a>	Cable Actuated Sensor
<a href="#">PT150-2500-111-5110</a>	
<a href="#">PT8420-0010-121-1120</a>	
<a href="#">MT2A-9E-33-10K-S</a>	
<a href="#">M150</a>	
<a href="#">PT5MA-50-S47-DN-420E-M6M</a>	Sensor
<a href="#">04-0790-0102</a>	TRANSDUCER
<a href="#">PT101-0002-111-1110</a>	
<a href="#">PT101-0005-111-3110</a>	TRANSDUCER
<a href="#">PT101-0005-111-4110</a>	TRANSDUCER
<a href="#">PT101-0010-111-4110</a>	TRANSDUCER
<a href="#">PT101-0015-111-3130</a>	TRANSDUCER
<a href="#">PT101-0015-112-3110</a>	TRANSDUCER
<a href="#">PT101-0025-111-1130</a>	TRANSDUCER
<a href="#">PT101-0025-114-3130</a>	TRANSDUCER
<a href="#">PT101-0030-111-2110</a>	TRANSDUCER

Product	Description
<a href="#">PT101-0030-111-3110</a>	TRANSDUCER
<a href="#">PT101-0040-111-4110</a>	TRANSDUCER
<a href="#">PT101-0040-113-3120</a>	TRANSDUCER
<a href="#">PT101-0040-114-4110</a>	TRANSDUCER
<a href="#">PT101-0050-113-4110</a>	
<a href="#">PT101-0060-111-3130</a>	Pulling position transducer
<a href="#">PT101-0060-113-4110</a>	TRANSDUCER
<a href="#">PT101-0060-113-4130</a>	TRANSDUCER
<a href="#">PT101-0075-111-4110</a>	TRANSDUCER
<a href="#">PT101-0075-111-4120</a>	TRANSDUCER
<a href="#">PT101-0075-113-4110</a>	
<a href="#">PT1A-10-DN-5K-M6</a>	TRANSDUCER
<a href="#">PT1A-10-FR-5K-M6-SG (13533)</a>	Pulley sensor
<a href="#">PT1A-10-UP-10K-M6</a>	TRANSDUCER
<a href="#">PT1A-15-FR-5K-M6-SG</a>	TRANSDUCER
<a href="#">PT1A-15-FR-5K-MC4-SG</a>	TRANSDUCER
<a href="#">PT1A-15-UP-1K-M6</a>	TRANSDUCER
<a href="#">PT1A-15-UP-1K-MC4</a>	
<a href="#">PT1A-20-UP-10K-M6</a>	TRANSDUCER
<a href="#">PT1A-20-UP-5K-C25-SG</a>	TRANSDUCER
<a href="#">PT1A-20-UP-5K-M6</a>	TRANSDUCER
<a href="#">PT1A-30-FR-500-M6</a>	
<a href="#">PT1A-30-UP-10K-M6</a>	TRANSDUCER
<a href="#">PT1A-40-FR-10K-MC4</a>	
<a href="#">PT1A-40-UP-10K-M6</a>	TRANSDUCER
<a href="#">PT1A-50-DN-10K-MC4</a>	TRANSDUCER
<a href="#">PT1A-50-DN-500-M6</a>	
<a href="#">PT1A-50-FR-10K-M6</a>	Cable Actuated Sensor
<a href="#">PT1A-50-FR-500-M6</a>	TRANSDUCER
<a href="#">PT1A-50-FR-5K-MC4</a>	TRANSDUCER
<a href="#">PT1A-50-UP-10K-C25</a>	TRANSDUCER
<a href="#">PT1A-50-UP-10K-M6-SG</a>	Cable Actuated Sensor
<a href="#">PT1A-50-UP-5K-M6</a>	TRANSDUCER
<a href="#">PT1DC-10-FR-Z10-MC4</a>	
<a href="#">PT1DC-25-UP-Z10-M6</a>	
<a href="#">PT1DC-40-UP-Z10-M6</a>	
<a href="#">PT1DC-40-UP-Z10-M6-SG</a>	TRANSDUCER
<a href="#">PT1DC-50-FR-Z10-C25</a>	TRANSDUCER
<a href="#">PT1DC-50-FR-Z10-M6-SG</a>	TRANSDUCER
<a href="#">PT1DC-50-FR-Z10-MC4</a>	TRANSDUCER
<a href="#">PT1DC-50-UP-Z10-M6-SG</a>	sensor
<a href="#">PT1DC-50-UP-Z10-MC4-SG</a>	TRANSDUCER
<a href="#">PT1DC-5-DN-Z10-M6</a>	
<a href="#">PT1DC-5-UP-Z10-MC4</a>	TRANSDUCER
<a href="#">PT1MA-10-FR-420E-C25-SG</a>	TRANSDUCER



Product	Description
<a href="#">PT1MA-10-FR-420E-M6</a>	Sensor
<a href="#">PT1MA-10-FR-420R-C25-SG</a>	TRANSDUCER
<a href="#">PT1MA-15FR-420E-M6-SG</a>	TRANSDUCER
<a href="#">PT1MA-20-DN-420E-M6-SG</a>	
<a href="#">PT1MA-20-DN-420R-M6-SG</a>	TRANSDUCER
<a href="#">PT1MA-20-DN-420R-MC4</a>	TRANSDUCER
<a href="#">PT1MA-20-FR-420E-M6</a>	TRANSDUCER
<a href="#">PT1MA-20-UP-420E-C25-SG</a>	TRANSDUCER
<a href="#">PT1MA-30-DN-420E-C25-SG</a>	TRANSDUCER
<a href="#">PT1MA-30-DN-420E-MC4</a>	TRANSDUCER
<a href="#">PT1MA-30-FR-420E-MC4-SG</a>	TRANSDUCER
<a href="#">PT1MA-30-UP-420R-C25-SG</a>	TRANSDUCER
<a href="#">PT1MA-40-DN-420R-MC4</a>	TRANSDUCER
<a href="#">PT1MA-40-FR-420E-MC4</a>	TRANSDUCER
<a href="#">PT1MA-40-UP-420R-MC4-SG</a>	TRANSDUCER
<a href="#">PT1MA-50-UP-420E-MC4</a>	
<a href="#">PT1MA-50-UP-420E-M6</a>	TRANSDUCER
<a href="#">PT420-0030-111-1210</a>	TRANSDUCER
<a href="#">PT420-0075- 111-1120</a>	Position Transducer
<a href="#">PT510-0075-113-1130</a>	TRANSDUCER
<a href="#">PT5DC-150-V62-UP-Z10-M6M</a>	TRANSDUCER
<a href="#">PT101-0100-111-1110</a>	Industrial motion & position sensors
<a href="#">PT420-0060-111-1110</a>	
<a href="#">PT420-0040-111-1110</a>	TRANSDUCER
<a href="#">PT8420-0015-111-1110</a>	Linear Potentiometer
<a href="#">MTA - 3AE - 5KC</a>	COMPACT STRING POT
<a href="#">PT8420-0015-121-1130</a>	POSITION TRANSDUCER
<a href="#">PT8420-0050-121-1130</a>	
<a href="#">MT2A-30E-33-10K-C2</a>	potentiometer
<a href="#">M2TA-15E-33-10K-C2</a>	
<a href="#">PT8420-0005-121-1130</a>	Position sensor
<a href="#">RT8510-0010-131-1130</a>	
<a href="#">PT510-0075-113-1120</a>	
<a href="#">PT1MA-10-BK-420E-C25</a>	
<a href="#">PT1A-20-FR-5K-M6-SG</a>	Position Sensor
<a href="#">PT1A-10-FR-5K-M6 (23374)</a>	Pulley sensor
<a href="#">PT5A-10-S47-UP-5K-M6M</a>	
<a href="#">632243-10 OEM</a>	Position Sensor
<a href="#">PT9420-075-121-1130</a>	
<a href="#">PTX101-0010-111-1110</a>	
<a href="#">IT9420-000-105-1110</a>	
<a href="#">MT3A-30L-33-10K-C1</a>	Transducer
<a href="#">PT5A-150-S47-FR-10K</a>	
<a href="#">9095000-0002</a>	
<a href="#">9603859-0350</a>	CABLE

Product	Description
<a href="#">VLS8420-0040-111-1130</a>	
<a href="#">PT5MA-100-S47-FR-420E-M6</a>	cable-extension transducer
<a href="#">PT8420-0060-111-1513</a>	
<a href="#">9604254-0150</a>	
<a href="#">MT3A-30E-9-10K-C1</a>	
<a href="#">9000320-0006</a>	CONNECTOR
<a href="#">9036810-0018</a>	
<a href="#">96504444-0119</a>	
<a href="#">PT9600-0350-121-S02</a>	
<a href="#">PT510-0100-H11-1130</a>	
<a href="#">PT5DC-125-N34-UP-Z10-M6M</a>	
<a href="#">PT9510-0150-212-1130</a>	
<a href="#">PT8510 - 0015 - 111 - 1130</a>	Transducer
<a href="#">9036810-0001</a>	6-Pin Metal Mating Plug
<a href="#">PT5A-150-S47-UP-10K-M6</a>	
<a href="#">MT2A-15E-33-10K-C2</a>	TRANSDUCER
<a href="#">CLWG-150-SC4</a>	FLOW GAUGE
<a href="#">PT8150-0030-111-3340</a>	
<a href="#">PT101-0100-113-4110</a>	
<a href="#">632243-10 Rev B</a>	Rotation Position Sensor
<a href="#">PT9420-0100-121-1130</a>	Cable Actuated Sensor
<a href="#">VLS-RBS9420-0075-114-1110</a>	Cable Actuated Sensor
<a href="#">RT8510-0R50-142-1110</a>	transducer
<a href="#">PT8510-0030-121-1130</a>	
<a href="#">PT9420-0250-121-1110</a>	Position Transducer
<a href="#">PT1MA-50-BK-420E-C25-SG</a>	Sensor
<a href="#">PT8101-0060-211-3160</a>	extensometer
<a href="#">CLWG-360-NC4</a>	Potentiometer
<a href="#">PTX250-1X1-1110-632030D</a>	
<a href="#">PT5X-2000-N34-FR-631889F / 23106</a>	cable path sensor
<a href="#">RT9420-OR50-121-1110</a>	Encoder
<a href="#">PT1A-20-FR-5K-MC4-5G</a>	Rope encoder
<a href="#">PT1A-10-FR-5K-MC4-SG</a>	Position sensor
<a href="#">RT8420-0020-112-1110</a>	
<a href="#">PT8510-0040-311-1131</a>	Distance Sensor
<a href="#">RT9420-0003-121-1120</a>	Rotational Position Transducer
<a href="#">PT8420-0030-311-1610</a>	Pulley sensor
<a href="#">PT8420-0050-311-1610</a>	sensor
<a href="#">9000480-0013</a>	Swirl and clip
<a href="#">9603803-0300</a>	TRANSDUCER KIT CABLE CAN
<a href="#">PT8150-0050-211-14X0-8093A</a>	Stream Pot Encoder
<a href="#">RT8420-0020-111-1130</a>	Rotational Position Transducer
<a href="#">PT9420-0200-121-1110</a>	
<a href="#">RT8420-0001-142-1130</a>	
<a href="#">PT5DC-100-S47-UP-Z10-M6</a>	RAM INDICATION SWITCH

Product	Description
<a href="#">PT420-0050-111-1120</a>	LINEAR TRANSDUCER
<a href="#">PT5A-250-N34-UP-10K-M6</a>	Cable Actuated Sensor
<a href="#">632243-1 Rev B</a>	
<a href="#">PT9420-0200-321-1170</a>	Transducer
<a href="#">PT9420-0150-321-1170</a>	Trasducer
<a href="#">PT9420-0100-321-1170</a>	Trasducer
<a href="#">RT8420-0005-112-1140</a>	position indicator
<a href="#">PT5DC-40-V62-UP-Z10-M6M</a>	
<a href="#">RBS9600-0450-422-S02</a>	
<a href="#">RBS9600-0500-422-S02</a>	
<a href="#">PT8420-0030-121-1210</a>	
<a href="#">9603999-0030</a>	
<a href="#">9603872-0100</a>	Cylinder transducer LT and HMC, Cable kit
<a href="#">PT5AV-125-V62-FR-500-M6</a>	Cable path transducer
<a href="#">PT9420-0550-112-1110</a>	Cable Actuated Sensor
<a href="#">PT8420-0002-111-1110</a>	transducer
<a href="#">PT9420-0100-321-1120</a>	Cable Actuated Sensor
<a href="#">PT9420-0075-321-1120</a>	Cable Actuated Sensor
<a href="#">PT9420-0250-321-1120</a>	Cable Actuated Sensor
<a href="#">PT1MA-50-FR420EX632656B</a>	Transducer
<a href="#">PT5MA-125-S47-UP-420E-M6</a>	Displacement Transducer
<a href="#">4360622</a>	Angle sensor
<a href="#">PT1MA-5-UP-420E-M6</a>	Potentiometer
<a href="#">PT8101-0040-111-1110-632273A</a>	Path Knife
<a href="#">9035830-0001</a>	CONNECTOR
<a href="#">101-0040-111-5130</a>	Cable Actuated Sensor
<a href="#">PT9101-0400-121-1110</a>	Cable path transducers
<a href="#">RBS9420-0350-424-1110</a>	
<a href="#">SG1-120-2</a>	Cable Actuated Sensor
<a href="#">PT8101-0040-111-2110</a>	Cable Actuated Sensor
<a href="#">PT5MA-150-S47-UP-420E-M6</a>	Cable path transducers
<a href="#">PT101-0100-111-1130</a>	
<a href="#">PT9510-0100-221-1110</a>	DIGITAL ENCODER TRANSDUCER
<a href="#">PT8420-0040-121-1110</a>	Absolute linear position transducer
<a href="#">CLP-250</a>	TRANSDUCER
<a href="#">CLWG-300-NC4</a>	TRANSDUCER
<a href="#">PTX101-0050-112-2100</a>	potentiometer
<a href="#">PT1A-50-FR-10K-M6-632330A</a>	String Potentiometers
<a href="#">PT9101-1200 - 122 - 111</a>	Displacement sensor
<a href="#">PT9420-1700-114-1620</a>	Level device
<a href="#">PT9150-0800-122-3120</a>	Linear transducer
<a href="#">RT9420-0020-121-1120</a>	
<a href="#">PT8101-0040-111-1110</a>	
<a href="#">RT9420-0R25-121-1110</a>	Rotary Potentiometer
<a href="#">CLWG-500-SC4</a>	

Product	Description
<a href="#">PT101-0075-111-1120</a>	
<a href="#">632205-25</a>	Position Sensor
<a href="#">PT1A-20-BK- 500-M6</a>	
<a href="#">PT8420-0060-111-1120</a>	Cable Actuated Sensor
<a href="#">PT420-0030-111-12X0-631738C</a>	draw-wire transducer
<a href="#">PT510-0030-111-1110</a>	draw-wire transducer
<a href="#">PT9420-0200-111-1130</a>	
<a href="#">PT9420-0075-111-1130</a>	
<a href="#">9085000-0030</a>	POTENTIOMETER
<a href="#">RT9420-0001-111-1120</a>	
<a href="#">DV301-0050-111-1110</a>	Transducer
<a href="#">PT9600-0100-121-S04</a>	
<a href="#">PT5MA-150-S47-DN-420R-M6</a>	Detection system
<a href="#">CLWG-500-MC4</a>	
<a href="#">PT101-0010-1110</a>	
<a href="#">PT9420-0300-422-1120</a>	
<a href="#">PT5MA-100-N34-UP-420E-M6</a>	
<a href="#">PT8150-0030-311-2110</a>	
<a href="#">RT9420-0002-121-1120</a>	
<a href="#">9036830-0001</a>	PART
<a href="#">PT101-0020-111-1110</a>	Potentiometer
<a href="#">PT101-0030-111-1110</a>	TRANSDUCER
<a href="#">PT101-0040-111-1110</a>	
<a href="#">PT8420-0050-311-1120</a>	sensor
<a href="#">RT8420-0020-241-1220</a>	Rotary transmitter
<a href="#">PT420-0005-114-1120</a>	
<a href="#">PT9420-0350-122-1210</a>	sensor
<a href="#">PT9420-0600-111-1130</a>	Sensor
<a href="#">PT8420-0030-121-1131</a>	
<a href="#">RT8420-0030-221-1130</a>	
<a href="#">PT9420-0400-421-1520</a>	
<a href="#">PT1DN-25-UP-MC5</a>	
<a href="#">PT420-0020-114-1210</a>	
<a href="#">PTX101-0010-111-4110</a>	
<a href="#">PT8420-0030-521-1121</a>	
<a href="#">PT8150-0625-131-1240</a>	Encoder
<a href="#">MT2A-15E-9-10K-C2A</a>	
<a href="#">IT9420-000-060-1110</a>	angular sensor
<a href="#">RT8420-0020-241-1270</a>	
<a href="#">9036830-0001 (MS3106E-14S-6S)</a>	
<a href="#">9035830-0001 (MS3106E-14S-6P)</a>	
<a href="#">PT9420-0100-121-1110 (04-0979-0043)</a>	Cable Actuated Sensor
<a href="#">PT8420-0040-811-1110</a>	draw-wire transducer
<a href="#">DPT250-0625-111-1310</a>	
<a href="#">PT8420-0010-111-12X0-8253</a>	

Product	Description
<a href="#">PT9420-0075-122-1110</a>	
<a href="#">PT5MA-50-S47-UP-420E-C25</a>	
<a href="#">PT8420-0030-111-1113</a>	position trans
<a href="#">PT8420-0030-311-1111</a>	
<a href="#">PT8420-0030-821-1121</a>	
<a href="#">PT5MA-0200-N34-FR-420E-C25</a>	
<a href="#">MT2A-9E-33-10K-C2A</a>	POSITION TRANSDUCER
<a href="#">632243-1</a>	Potentiometer
<a href="#">PT9420-0600-111-1110</a>	PT9420-0600-111-1110
<a href="#">PT9420-0300-213-1110</a>	POTENTIOMETER
<a href="#">PT9420-0200-312-1150</a>	sensor
<a href="#">PT5E-100-S47-UP-100-AB-OC-M6</a>	
<a href="#">PT1E-50-UP-250-AB-OC-MC4</a>	
<a href="#">PT8420-0010-101-1111XD-8253</a>	
<a href="#">PT9420-0300-300-2131-110</a>	
<a href="#">PT1A-40-FR-10K-M6</a>	ROPE POTENTIOMETER
<a href="#">PT1DC-50-FR-10Z-MC4-SG</a>	
<a href="#">SP2-50</a>	draw-wire transducer
<a href="#">PT8420-0050-111-1123</a>	
<a href="#">1361-1-4-41</a>	
<a href="#">IT9420-030-030-1220</a>	
<a href="#">PT8420-0060-111-1240</a>	
<a href="#">PT8420-0060-311-1210</a>	Cable Actuated Sensor
<a href="#">PT9600-0500-221-S02</a>	Pulling position transducer
<a href="#">PT1MA-50FR-420E-X-632450C</a>	
<a href="#">PT1E-625-UP-50-ABC-UD-M6</a>	Pulling position transducer
<a href="#">PT9420-0400-111-1210</a>	transducer
<a href="#">PT8420-0060-111-1130</a>	TRANSDUCER
<a href="#">PT9420-0200-113-110</a>	
<a href="#">PT9420-0250-113-110</a>	
<a href="#">PT9420-0100-113-110</a>	
<a href="#">PT9420-0150-113-110</a>	
<a href="#">PT9420-0075-124-1110</a>	Transducer
<a href="#">PT9420-04000-111-1210</a>	Pulling position transducer
<a href="#">IT9420-060-060-1111</a>	inclinometer
<a href="#">PT1232-0030-FR-M6</a>	
<a href="#">PT420-0025-114-1140</a>	TRANSDUCER
<a href="#">PT8150-0625-131-1240-8105</a>	
<a href="#">PT420-0050-111-1210</a>	CLASSIC STRING POT
<a href="#">926300-3</a>	
<a href="#">926893-3</a>	
<a href="#">165026-0</a>	
<a href="#">926539-5</a>	
<a href="#">PT1A-15-UP-10K-M6</a>	TRANSDUCER
<a href="#">PT9420-0500-111-11X0-8332</a>	

Product	Description
<a href="#">RBS9420-0150-112-1110</a>	cable travel transducer
<a href="#">PT9420-0550-211-1110</a>	Position Transducer
<a href="#">PT1DC-50-FR-Z5-M6</a>	cable travel transducer
<a href="#">PT510-0015-H11-1110</a>	Position Transducer
<a href="#">RT8420-0020-141-1210</a>	ROTARY SENSOR
<a href="#">PT1A-40BK-10K-M6</a>	
<a href="#">RT9420-0R25-221-1110</a>	Rotary Potentiometer
<a href="#">PT9101-0100-121-3130</a>	cable displacement transducer
<a href="#">CLWG-300-MC4</a>	
<a href="#">SGD-80-3</a>	Cable Actuated String Pot
<a href="#">MTA-5AE-5KC</a>	
<a href="#">PT420-0100-111-1210</a>	
<a href="#">SP1-50-3 (14252)</a>	Pulley sensor
<a href="#">PT9420-0075-312-1510</a>	SENSOR
<a href="#">PT101-0100-113-4110-7627</a>	
<a href="#">PT8150-0030-121-3110</a>	ROTATIONAL TRANSDUCER
<a href="#">PT8510-0010-311-1120 (19422)</a>	Pulley sensor
<a href="#">PT9DN-75-AL-N34-52FR-250-NR</a>	CABLE-EXTENSION POSITION TRANSDUCER
<a href="#">PT420-0050-111-1110</a>	
<a href="#">PT9600-0250-221-S02</a>	String Encoder
<a href="#">PT5MA 60 S47 FR 420E MC4</a>	
<a href="#">PT8420-0025-521-1310</a>	cable
<a href="#">9603816-0030</a>	cable
<a href="#">VLS8420-0040-111-1220 / 18161</a>	cable path sensor
<a href="#">MT3A-30E-14-10K-C1A</a>	
<a href="#">PT9420-0550-311-1120</a>	
<a href="#">PT9600-0550-212-S04</a>	
<a href="#">PT101-0050-113-5110</a>	transformer
<a href="#">PT9510-0200-121-1110</a>	
<a href="#">MT3A-30E-33-10K-BC</a>	Draw-wire sensor
<a href="#">PT5A-150-S47-UP-10K-M</a>	
<a href="#">9085000-0013</a>	
<a href="#">PT9420-0300-421-1570</a>	
<a href="#">9650693-0000</a>	
<a href="#">PT8101-0025-111-3150</a>	
<a href="#">PT9420-0400-321-1120</a>	Cable Actuated Sensor Industrial
<a href="#">PT1MA-50-UP-420E-MC4 (23193)</a>	cable path sensor
<a href="#">PT420-0060-111-1210</a>	
<a href="#">RT9420-005-121-1130</a>	
<a href="#">DPT250-0050-111-6430</a>	
<a href="#">PT9420-0200-224-1110</a>	Cable Actuated Sensor
<a href="#">PT8150-0030-121-4110</a>	encoder
<a href="#">PT5MA-60-S47-UP-420E-M6</a>	Cable Actuated Sensor Industrial Grade
<a href="#">9085000-0010</a>	Potentiometer
<a href="#">PT420-0075-114-1110</a>	

Product	Description
<a href="#">IT9420-060-000-1110</a>	Inclinometer
<a href="#">PT1A-2-FR-5K-M6-SG</a>	
<a href="#">PT8420-0020-221-1123</a>	TRANSDUCER
<a href="#">PT9420-0250-114-1110</a>	Linear Transducer
<a href="#">PT5MA-80-S47-UP-420E-M6</a>	
<a href="#">PT510-0050-111-1130</a>	
<a href="#">PT9420-0150-124-1210</a>	
<a href="#">MLP-150</a>	
<a href="#">632303A</a>	
<a href="#">PT8420-0040-311-1510</a>	Cable Actuated Sensor Industrial
<a href="#">IT9420-000-045-1110</a>	
<a href="#">PT8420-0030-311-1310</a>	Linear Potentiometer
<a href="#">632340-24</a>	Position Sensor
<a href="#">632340-12</a>	Position Sensor
<a href="#">9603512-0024</a>	Cable
<a href="#">PT9600-0075-121-S01</a>	Rotary Encoder to a Linear Position Sensor
<a href="#">PT8420-0020-111-1110</a>	Potentiometer
<a href="#">connector for RT9420-0001-121-1110</a>	
<a href="#">PT9420-0150-112-1650</a>	
<a href="#">PT9150-0500-222-1440</a>	
<a href="#">PT8510-0060-111-1143</a>	
<a href="#">PT9420-0250-224-1110</a>	Cable Actuated Sensor Industrial
<a href="#">PT5MA-200-N34-FR-420E-MC4</a>	position transducer
<a href="#">PT9510-0150-112-1110</a>	
<a href="#">IT9420-045-000-1110</a>	
<a href="#">PT9420-0400-422-1570</a>	
<a href="#">PT5MA-30-S47-BK-420E-C25</a>	encoder
<a href="#">PT5A-150-V62-UP-5K-M6M</a>	
<a href="#">PT5A-150-S47-UP-10-M6</a>	
<a href="#">PT9420-0250-111-1110</a>	
<a href="#">PTX101-0010-111-4100</a>	
<a href="#">PT5MA-80-S47-FR-420E-M6</a>	
<a href="#">PT9420-0450-122-1110</a>	
<a href="#">PT8150-0625-221-1240</a>	Encoder
<a href="#">RT8420-0R50-242-1130</a>	
<a href="#">633237</a>	
<a href="#">PT8420-0010-511-1121</a>	
<a href="#">PT8420-0005-121-1131</a>	
<a href="#">PT9420-0150-114-1130</a>	
<a href="#">PT420-0020-111-1210</a>	
<a href="#">PT8420-0050-111-1510</a>	
<a href="#">PT8420-0060-111-1210</a>	
<a href="#">PT420-0015-111-1110</a>	
<a href="#">PT9420-0150-121-1310</a>	Wire position transducer
<a href="#">PT9420-0250-221-1110</a>	Wire position transducer

Product	Description
<a href="#">RBS9101-0250-114-4110</a>	
<a href="#">PT8420-0030-311-1510</a>	TRANSDUCER
<a href="#">PT9420-0075-112-1110</a>	
<a href="#">PT5E-200-N34-FR-200-ABC-UD-MC4</a>	
<a href="#">PT9150-8750-221-2110</a>	
<a href="#">PT8420-0010-111-11XO-8253</a>	
<a href="#">PT5232-200-N34-DN-G25</a>	
<a href="#">PT8510-0005-111-1110</a>	Transducer
<a href="#">PT9420-0250-421-1550</a>	
<a href="#">PT8101-0030-221-5130</a>	
<a href="#">PT9420-0250-114-1210</a>	Linear position transducer
<a href="#">PT8420-0025-121-1130</a>	
<a href="#">VLS-RBS9420-1200-111-1110</a>	
<a href="#">PT-8420-0010-111-1222</a>	
<a href="#">9603859-0450</a>	450" 0.047 bare stainless cable kit
<a href="#">9603859-0550</a>	550" 0.047 bare stainless cable kit
<a href="#">PT9510-0400-111-1110</a>	Cable Extension Transducer PT9510
<a href="#">PT9420-0400-111-1120</a>	transducer
<a href="#">PT5MA-0200-N34-FR-420E-M6</a>	
<a href="#">PT9420-0250-312-1110</a>	
<a href="#">PT8420-0060-841-1260</a>	linear transducer
<a href="#">PT8420-0020-841-1260</a>	linear transducer
<a href="#">PT8510-0010-311-1120</a>	
<a href="#">MT2A-9E-33-10K-C1A</a>	potentiometer
<a href="#">PT9420-0150-314-1310</a>	
<a href="#">PT9420-1200-114-1110</a>	TRANSDUCER
<a href="#">PT9420-0400-421-1170</a>	Cable-Extension Position Transducer PT9(420)
<a href="#">PT5A-100-S47-FR-10K-M6</a>	
<a href="#">632340-24 REV D</a>	
<a href="#">PT150-0050-111-5110</a>	
<a href="#">9080000-003</a>	transducer
<a href="#">PT9420-0100-421-1170</a>	
<a href="#">PT9101-0150-122-4110</a>	
<a href="#">PT9600-1700-311-S02</a>	
<a href="#">PTX150-0025-111-4300</a>	
<a href="#">9603918-0030</a>	
<a href="#">PT9420-0075-121-1110</a>	
<a href="#">IT9420-060-030-1150</a>	
<a href="#">PTX101-0050-112-4100</a>	
<a href="#">9078828-0001</a>	Pulley, Timing, VALOX, PT900
<a href="#">9678949-0029</a>	Main shaft gear
<a href="#">PT8150-0060-111-4110</a>	
<a href="#">PT1A-20-UP-500-M6</a>	