



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Meister

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">45XM1024XG15W</a>	flow monitor
<a href="#">52XM1002XG08WA</a>	Flow switch
<a href="#">DKM/A-1/4 G 1/2" / 53XM1004XG15OA</a>	artikel number: 52XM1004G15WA90261081
<a href="#">DKM-1/30 G 1"</a>	flow monitor
<a href="#">DUM-28 G 1/2"</a>	flow switch G 1/2"
<a href="#">IH9PF40-22</a>	AC Motor
<a href="#">RH8PF25-22-HI</a>	Ac Motor
<a href="#">52XM1004XG15WA</a>	flow monitor
<a href="#">CHP090027</a>	Ladegerät
<a href="#">3102-B</a>	Akku
<a href="#">SG-30X70-1.5A-W</a>	Switch Kit
<a href="#">DKM/A-1/110</a>	
<a href="#">Nr. 4XE1110XG25WA Type DKM/A-1/110 G 1"</a>	Flow Monitor & Flow Indicator
<a href="#">8H180FM-HI</a>	Reducer
<a href="#">SG-15X50-ST220S</a>	Switch housing normally open (NOC)
<a href="#">50XM1015XG25W</a>	Flow switch DKM-1/15 G 1"
<a href="#">DKM-1/15 G 1"</a>	Strömungswächter
<a href="#">50XM1060XG25W</a>	
<a href="#">8H30FM- HI</a>	Gear head
<a href="#">DUG-14 (60XM0014XG15S)</a>	Flow monitor
<a href="#">DUG-22 (60XM0022XG15S)</a>	flow switch
<a href="#">61XE0150XG32S</a>	Flow Monitor & Flow Indicator
<a href="#">DKM/A-1/60 G 1" / 52XM1060XG25WVA</a>	flow monitor
<a href="#">DKM/A-1/8 G 1"</a>	flow monitor
<a href="#">DKM/A-1/15 G 1" 52XM1015XG25WVA</a>	flow switch
<a href="#">DKM-1/24 G 1"</a>	
<a href="#">DKM/A-1/24-G1" (55XE1024XG25OA)</a>	Flow Indicator
<a href="#">DKM/A-1/10 G 1" / 52XM1010XG25WVA</a>	flow monitor
<a href="#">DKM/A-1/60 G 1"</a>	flow monitor
<a href="#">P/N: 52XM1015XG25SA Type: DKM/A-1/15 G 1"</a>	flow switch
<a href="#">DKM/A-1/2 G 1/2"</a>	flow switch
<a href="#">DKM-1/10 G 1"</a>	
<a href="#">55XE1024XG15OA</a>	
<a href="#">54XE1024XG15W12</a>	flow switch
<a href="#">55XE1060XG25OA</a>	
<a href="#">54XE1060XG25W12</a>	flow switch

Product	Description
<a href="#">62XM0004.G08S</a>	
<a href="#">DOKU-DVD</a>	DVD
<a href="#">50XM1045XG25S</a>	flow monitor
<a href="#">50XM1045XG25W</a>	
<a href="#">DKG-1/15 G 3/4" (Artikel-Nr. 47XE1015XG20W)</a>	flow Switch
<a href="#">SG-30BWE-1A-W</a>	
<a href="#">50XM1008XG15W</a>	flow Switch
<a href="#">50XM1008XG15SI4.0</a>	flow Switch
<a href="#">Prüfprotokoll für DKM-1/8</a>	Test protocol for DKM-1 / 8
<a href="#">SG-30BLA-3A-SK15</a>	Switch housing normally open (NOC)
<a href="#">DKG-2/2</a>	Flow switch
<a href="#">3102B i-Drill (black)</a>	battery
<a href="#">52XM1045XG25WA</a>	
<a href="#">50XM1004XG15W</a>	Sensor
<a href="#">51XE1110XG25SI4.0</a>	Durchflussmesser DKM-1/110 G 1"
<a href="#">50XM1110XG25SI4.0</a>	flow meter
<a href="#">DKM-1/24 G 1/2"</a>	flow Switch
<a href="#">DKM-1/4 G 1/2" (50XM1004XG15W)</a>	flow Switch
<a href="#">DKM-2/3 G 1/2" (51XE2003XG15S)</a>	flow Switch
<a href="#">SG-30BLA-1.5A-W (für DKM/A-1/24)</a>	Schaltgehäuse Wechsler (COC
<a href="#">DWG-12 G 1/2" (22XE0012XG15W0)</a>	Strömungswächter
<a href="#">50XM1008XG20S</a>	Switch
<a href="#">RVM/U-2/7 G 1/2"</a>	Flow monitor
<a href="#">DKM/A-1/24 G 3/4" 55XE1024XG20OA</a>	Flow indicator
<a href="#">RVM/UA-2/13 G 3/4"</a>	
<a href="#">52XM1008XG25PA</a>	flow monitor
<a href="#">9H9FE-AK</a>	
<a href="#">RVM/U-2/11 G 1/2"</a>	Flow guards
<a href="#">DKME/A-1/80 G 1" (84AE1080XG25S)</a>	Flow Monitor
<a href="#">10SM2003XG15WKA</a>	
<a href="#">10SM2003XG15WK5</a>	
<a href="#">60XM0150XG32SEM / DUG-150 G 5/4"</a>	Flow indicator
<a href="#">53XM1110XG250A</a>	Flow Indicator
<a href="#">52XM1110XG25ALA</a>	Flow Monitor
<a href="#">RVO/U-4/2-30GPH-.250-B-2-NO1</a>	
<a href="#">RVO/U-1/150NPT 1"</a>	flow switch
<a href="#">GLS-O-U-1-150F</a>	switch housing normally open
<a href="#">DKM/A-1/90 G 1"</a>	
<a href="#">Seal Kit for RVO/U-1/150</a>	
<a href="#">03XE1030XG20S</a>	flow switch
<a href="#">DKG-1/30 G 3/4"</a>	flow monitor
<a href="#">DKM-1/4 G 1/2"</a>	flow switch
<a href="#">DKG - 2/4G 1/2"</a>	flow switch
<a href="#">DKM/A-1/45 G 1"</a>	flow switch
<a href="#">SG-30BLA-1.5A-W</a>	switching contact

Product	Description
<a href="#">DUG-28 G1/2"</a>	flow switch
<a href="#">DKM/A-1/8 G 1" (52XM1008XG25WA)</a>	flow switch
<a href="#">DKME-1/80 G 1"</a>	Flow switch
<a href="#">61XE0028XG15O</a>	Flowmeter
<a href="#">DICHT-S-NBR</a>	Gasket kit for flow meter
<a href="#">GLS-DUG-028F</a>	
<a href="#">DKG-1/2 G 1/2"</a>	flow switch
<a href="#">10XM2013XG15S / RVM/U-2/13 G 1/2"</a>	sensor
<a href="#">DUG-110 G 1"</a>	flow monitor
<a href="#">45XM1024XG15S</a>	Flow monitor
<a href="#">60XM0110XG25W</a>	.
<a href="#">DKM-1/60 G 1"</a>	Flowmeter
<a href="#">DKM-1/45 G 1"</a>	Flowmeter
<a href="#">52XM1045XG25DA</a>	flow monitor
<a href="#">45XM1004XG25S</a>	Flow monitor
<a href="#">47XE1004XG25S</a>	Flow monitor
<a href="#">10XM2003XG10S</a>	flow monitor RVM/U-2/3 G 3/8"
<a href="#">DKG -1/8LPM-1.00BSP-B-1</a>	
<a href="#">DUM/A-28 G 1/2" (65XCA028XG15S12.)</a>	Flow monitor
<a href="#">Type DKG-1/8 3/4"</a>	Flow indicator
<a href="#">63XE0004XG08ST510</a>	Flow monitor
<a href="#">SG-30BLA-3A-S</a>	Switch housing normally open (NOC)
<a href="#">9H60FE-MS</a>	Gearhead
<a href="#">P/N: 60XM0014XG15S Type: DUG-14 G 1/2"</a>	flow monitor
<a href="#">SG-30BLA-3A-S for DKME 1/20</a>	switch housing normally open (NOC)
<a href="#">20XM0012XG15S</a>	flow monitor
<a href="#">52XM1010XG25DA</a>	flow monitor
<a href="#">52XM1060XG25WA</a>	flow monitor
<a href="#">52XM1008XG15SI4.0</a>	flowmeter
<a href="#">SG-15X50-ST500W (COC)</a>	Switch housing changer
<a href="#">DKM-1/2 G 1/2"</a>	flowmeter
<a href="#">Nr. 09XM0025XG15S Type WY-15 G 1/2"</a>	flow monitor
<a href="#">DUG-22 G 1/2 MS NOC</a>	
<a href="#">SG-30ROT-3A-S</a>	Switch housing normally open NOC
<a href="#">RVO/U-2/8 G 1/2" / 03XE2008XG15W</a>	flow monitor
<a href="#">DWG-8 G 1/2"</a>	flow switch
<a href="#">20SM0008XG15S</a>	
<a href="#">SG-30ROT-3A-S13</a>	
<a href="#">G-30BLA-1.5A-W</a>	
<a href="#">84AE1080XG25S</a>	
<a href="#">52XM1024XG25PA / DKM/A-1/24 G 1"</a>	flow switch
<a href="#">11XE40.6XG08S</a>	flow switch
<a href="#">47XE1015XG20W</a>	FLOW SWITCH
<a href="#">DKG-1/8 G 1/2" / 45XM1008XG15W</a>	flow monitor
<a href="#">RVO/U-2/15 G 1/2"</a>	flow monitor

Product	Description
<a href="#">DKM/A-1/1 G 1/4" / 54XE1001XG08SA</a>	flow monitor
<a href="#">20XM0018XG15S - DWG-18 G 1/2</a>	
<a href="#">DKM-1/2 G 1/4"</a>	flow monitor
<a href="#">DKM/A-1/2-1.5LPM-.500BSP-SS-1-CH1/ATEX</a>	Flowmeter
<a href="#">Certificate of Compliance</a>	Certificate of Compliance
<a href="#">Certificate of Calibration</a>	Certificate of Calibration
<a href="#">52XM1024XG25PA</a>	flow monitor
<a href="#">52XM1015XG25PA</a>	flow monitor
<a href="#">45XM1024XG20W</a>	flow monitor
<a href="#">45XM1004XG15W</a>	flow monitor
<a href="#">45XM1010XG20W</a>	flow monitor
<a href="#">AP-KABEL</a>	wires
<a href="#">52XM1060XG25DA</a>	flow monitor
<a href="#">52XM1024XG20SA</a>	flow monitor
<a href="#">DKM/A-1/8LPM-1.00BSP-B-1-CH1</a>	
<a href="#">DKM/A-1/2-1.5LPM-.500BSP-B-1-NO1</a>	
<a href="#">80XM1080XG25S</a>	flow monitor
<a href="#">IH8PF40-22</a>	AC Motor
<a href="#">8H30FM</a>	Gear head
<a href="#">5450470</a>	replacement battery
<a href="#">RVO/U-2/12LPM-.500BSP-B-1</a>	
<a href="#">IHT9PF40-22YC</a>	AC Motor
<a href="#">50XM2003XG15W</a>	flow monitor
<a href="#">81XE1040XG25SEM</a>	flow monitor
<a href="#">03XE2015NP15S</a>	flow meter
<a href="#">01XM2008XG15S</a>	flow monitor
<a href="#">SG-30S-W-B-STP</a>	Switch housing changer (COC)
<a href="#">FL-110-01-F</a>	Guide rail
<a href="#">20XM0018XG20W</a>	
<a href="#">50XM1002XG25W</a>	Flow Monitor
<a href="#">DKM/A-1/10 G 1/2"</a>	flow monitor
<a href="#">01XM40.2XG08S</a>	Flow Switch
<a href="#">DKM-1/4 G 3/4"</a>	flow monitor
<a href="#">50XM1004XG25W / DKM-1/4 G 1"</a>	flow monitor
<a href="#">45XM2008XG15S-VSB-01</a>	flow monitor
<a href="#">AP SWITCHING STATE</a>	
<a href="#">10XM20.6XG15SKA</a>	
<a href="#">960MDKM001</a>	flow monitor
<a href="#">SG-30S-S-B-STP</a>	Switch housing closer (NOC)
<a href="#">54XE1024XG25WA</a>	
<a href="#">RH8PF25-22</a>	AC MOTOR
<a href="#">52XM1015XG25WA</a>	flow monitor
<a href="#">62XM0008XG10S</a>	flow monitor
<a href="#">64XMA028XG15S</a>	flow monitor
<a href="#">RVM/U-4/1 G 1/4"</a>	flow monitor

Product	Description
<a href="#">20XM0008XG15SEM // DWG-8 G 1/2"</a>	flow monitor
<a href="#">DKME/A-1/40 G 1/2"</a>	flowmeter
<a href="#">RVM/U-4/3 G1/4</a>	flow monitor
<a href="#">DKM-1/8 G 3/4" / 51XE1008XG20W12</a>	flow monitor
<a href="#">52XM1024XG25SI4.0 / DKM/A-1/24 G 1"</a>	flowmeter
<a href="#">52XM1010XG25SI4.0 / DKM/A-1/10 G 1"</a>	flowmeter
<a href="#">52XM1004XG25SI4.0 / DKM/A-1/4 G 1"</a>	flowmeter
<a href="#">45XM1008XG15SI4.0</a>	Flowmeter
<a href="#">81XE1020XG25SEM</a>	
<a href="#">11XE2007XG15W</a>	SWITCH
<a href="#">DWG-8 G 1/2 20XM0008XG15P</a>	flow monitor
<a href="#">DKM-2/3 G 1/2" / 50XM2003XG15W</a>	flow monitor
<a href="#">47XE1045XG25SI4.0</a>	flow Monitor
<a href="#">52XM1024XG25SA - DKM/A-1/24 G 1</a>	Strömungswächter
<a href="#">RVO/U-2/8 G 1/2" / 02XM2008XG15O</a>	flow indicator
<a href="#">01XM1030XG25WH</a>	Flow Indicator
<a href="#">10XM4003XG08W</a>	
<a href="#">IH9PG120-32 (H)</a>	Induction motor
<a href="#">9H180UB</a>	Induction Motor
<a href="#">20SM0008XG15S // DWG-8 G 1/2</a>	
<a href="#">01XM2001XG15W</a>	flow monitor
<a href="#">DUG-220 G 5/4" / 60XM0220XG32S</a>	flow monitor
<a href="#">DUG-220 G 5/4" / 61XE0220XG32S</a>	flow monitor
<a href="#">01XM4001XG08S</a>	Flow monitor