



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Midori

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">CP-2FABSJ</a>	Angle sensor
<a href="#">CP-2FABSJ-1K</a>	Conductive Plastic Angle Sensor
<a href="#">CPP-45B-10K</a>	Conductive plastic potentiometer
<a href="#">LP-50F-5K</a>	Transducer
<a href="#">QP-3HB-110-15</a>	
<a href="#">CP-2F-35S-RB-1-10K</a>	
<a href="#">CP-3FS-5K</a>	POT Motor
<a href="#">LP-100F-10K</a>	Linear Potentiometer
<a href="#">HP-16-5K</a>	
<a href="#">DM-15</a>	Digital count display
<a href="#">G3595 Navy</a>	safety shoes
<a href="#">CPP-45B-2K</a>	
<a href="#">CPP-45SB</a>	potentiometer
<a href="#">CPP-45-5K</a>	
<a href="#">CP-2UTX-07 OEM!</a>	
<a href="#">PMP-30TL-A06</a>	
<a href="#">LP-200F-1K</a>	Potentiometer
<a href="#">LP-20F-1</a>	CONDUCTIVE LINEAR SENSOR
<a href="#">CPP-45B-1K</a>	Potionmeter
<a href="#">Type: CPP-45B x 2; 1 kOhm x2</a>	Potentiometer
<a href="#">CPP-35B-46 5k</a>	Rotation angle sensor
<a href="#">PA420</a>	POSITION TRANSMITTER
<a href="#">CPP-45RBN-10K</a>	Potentiometer
<a href="#">CPP-45Bx3 2Kx3</a>	
<a href="#">CPP-60-5K</a>	Potentiometer
<a href="#">CP-2FABS OEM</a>	
<a href="#">CPP-45E-3-2K</a>	potentiometer
<a href="#">6111050J</a>	Sensor
<a href="#">LP-100FJ 1Kohm</a>	Sensor
<a href="#">LP-300FJS-10K</a>	Conductive Plastic Linear Sensor
<a href="#">LP-200FJS-5K</a>	Conductive Plastic Linear Sensor
<a href="#">LP-20UF-R10</a>	Sensor
<a href="#">LP-10FB 1Kohm</a>	Conductive Plastic Linear Sensor
<a href="#">PMP-30TL-A05</a>	
<a href="#">CPP-45B 5K Ω</a>	
<a href="#">LP-30FP-1K</a>	

Product	Description
<a href="#">40003485</a>	assembled potentiometer
<a href="#">CPP-45-10SX-2K</a>	
<a href="#">CP-2UN</a>	
<a href="#">PMP-S10TX OEM</a>	
<a href="#">PMP-S10LX-1</a>	Sensor
<a href="#">CP-2FK(b)J</a>	
<a href="#">LP-500FX-10K</a>	Linear Potentiometer with Dust Proof Green Pot
<a href="#">PMP-30TZL-A</a>	
<a href="#">LP-100F-13-1K</a>	Linear transducer
<a href="#">CPP-45B-1K CT(A)</a>	Potentiometer
<a href="#">LP-100F-51</a>	Linear Potentiometer
<a href="#">CP-2UKN-A, SN: 070035016</a>	sensor
<a href="#">CPP-45-10SX-SC-2K</a>	POTENTIOMETER
<a href="#">QP-3HB-210-01</a>	
<a href="#">CPP-45B-5K -</a>	encoder
<a href="#">61MC-05120</a>	potentiometer
<a href="#">542050</a>	Sensor
<a href="#">CPP-35B-31-P5K</a>	
<a href="#">CP-2UTX-07</a>	BLUE POT POTENTIOMETER
<a href="#">CP-2UTX S/N: 044856080</a>	Non-contact potentiometer
<a href="#">LP-50F-2-1K</a>	sensor
<a href="#">QP-3HB-110-02</a>	
<a href="#">YHB0009P - LP20FB33; FTMS 1</a>	POTENTIOMETER
<a href="#">CPP-35-10K</a>	
<a href="#">PMP-S10LX-8 (=PMP-S10L-8)</a>	
<a href="#">29459</a>	Potentiometer on the truck accelerator pedal
<a href="#">CP-2F-10S-RB-17-10K</a>	potentiometer
<a href="#">LP-20UF-R</a>	
<a href="#">CPP-45-12SX-SC-P5K</a>	
<a href="#">HP-18-1K</a>	
<a href="#">CPP-45-20K</a>	potentiometer
<a href="#">CP-2UK-R201</a>	
<a href="#">LP50F-15 5K</a>	POTENTIOMETER
<a href="#">UV -JHA-02</a>	
<a href="#">UV-JHA-03</a>	
<a href="#">CP-2FABSJ-124-1K OEM</a>	POSITION POTENTIOMETER
<a href="#">CP-2UKN-A</a>	
<a href="#">CP-2FK(b)J-10K</a>	
<a href="#">CPP - 45B-CT(A)-1K</a>	Sensor
<a href="#">CPP-45B-20K</a>	
<a href="#">CPP-45Bx2 CT(A)-1Kx2</a>	Conductive Plastic Angle Sensor
<a href="#">LP-100F-1K</a>	Linear Potentiometer
<a href="#">CP-2F-5S-RB-5K</a>	
<a href="#">CP-2F-5S-RB-10K</a>	potentiometer
<a href="#">CPP-45Bx2-1Kx2 CT(A)</a>	

Product	Description
<a href="#">PMP-S10HT</a>	angle sensor
<a href="#">6110020L / LP-20F-1K</a>	linear position potentiometer
<a href="#">CPP-45Bx3-2Kx3</a>	
<a href="#">LP-50F-1K</a>	Contact type linear displacement sensor
<a href="#">LP-20FB-1K</a>	
<a href="#">CP-45FB-1K</a>	Conductive Plastic Angle Sensor
<a href="#">MES-400</a>	
<a href="#">CP-45F-5K</a>	Potentiometer
<a href="#">LP-150F-62-5K</a>	linear potentiometer
<a href="#">LP-250FX-5K</a>	
<a href="#">LP-100F-62-5K</a>	
<a href="#">CP-2FB(B) J</a>	POTENTIOMETER
<a href="#">Ser.No 033547082</a>	Single Axis Tilt Angle Sensor
<a href="#">LP-20FB 2K</a>	linear motion sensor
<a href="#">LP-10FBJ-1K</a>	
<a href="#">CPP-35-2.0K</a>	Sensor
<a href="#">CP-2FCB(m) 5K</a>	
<a href="#">CP-45FB-2K</a>	
<a href="#">CPP-35B-07 P5K</a>	
<a href="#">CPP-35B-100</a>	
<a href="#">CP-2FCB-5K</a>	
<a href="#">LP-100F</a>	POTENTIOMETER
<a href="#">CP36US1-060-A</a>	
<a href="#">CP36US1-Z00-A</a>	
<a href="#">CPP-45 (61455000)</a>	potentiometer
<a href="#">6124345B</a>	
<a href="#">HP-18 10Kohm</a>	
<a href="#">LP-10F 1Kohm</a>	
<a href="#">PMP-30TL-A06 S/N 083033002</a>	Potentiometer
<a href="#">LP-100F 1Kohm (=LP-100F-C 1Kohm)</a>	
<a href="#">CP-2FABSJ-06</a>	Sensor
<a href="#">CP-2FABSJ-07</a>	Sensor
<a href="#">CP-2FABSJ-08</a>	Sensor
<a href="#">CPP-45-12SX-SC 5</a>	
<a href="#">CP-45Fx2 5KX2</a>	POTENTIOMETER
<a href="#">PT332110</a>	Potentiometer
<a href="#">6145200B</a>	Sensor
<a href="#">LP-50F 2Kohm</a>	POTENTIOMETER
<a href="#">LP20FB33; FTMS 1 / YHB0009P</a>	potentiometer
<a href="#">LP-150F-C 1K / LP-150F 1K</a>	
<a href="#">LP-100F 10Kohm</a>	
<a href="#">LP-100F-C10K</a>	
<a href="#">CPP-35B-46 5Kohm</a>	POTENTIOMETER
<a href="#">LP-60FP-1 1Kohm</a>	
<a href="#">CPP-35-B-07</a>	

Product	Description
<a href="#">MDL: QP-3HB-110-02</a>	
<a href="#">LP-150FX-37 1K</a>	
<a href="#">6131210H</a>	Sensor
<a href="#">CP-45F-10SX 1Kohm</a>	
<a href="#">6145X200B</a>	Angle Sensor
<a href="#">CP-2FK(B)J 10Kohm</a>	
<a href="#">QP-3HB-111-02 (s/n 111100009)</a>	sensor
<a href="#">LP-100 F / 62071</a>	
<a href="#">LP-100F-C</a>	LINEAR POTENTIOMETER
<a href="#">QP-3HB-211-15</a>	contactless angle potentiometer
<a href="#">CP-45FB 1Kohm</a>	
<a href="#">Model: QP-3HB-110-02</a>	
<a href="#">LP-100F 5Kohm</a>	sensor
<a href="#">CP-45F 2K</a>	Gear Head
<a href="#">CPP-35B 1K</a>	
<a href="#">CP-2HK-10R</a>	
<a href="#">LP-10FBS-4 1K</a>	