



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Aĝaoĝlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Weka

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">31130-ND/3</a>	magnetic switches
<a href="#">8400010</a>	
<a href="#">05012P</a>	DK-32 Engine Top Hood
<a href="#">31160-NN/20</a>	magnetic switch
<a href="#">33115/05</a>	Pipe float
<a href="#">8100 SA 8</a>	Metrico Ratchet Set
<a href="#">Tool-Check Plus</a>	Metric Tool
<a href="#">W1 Wartung</a>	Kraftform kompakt
<a href="#">31967-010-05-2000</a>	Level Transmitter
<a href="#">31967-010-05-400</a>	Level Transmitter
<a href="#">31160-NN/10</a>	Magnetic switch
<a href="#">31160-NN/5</a>	magnetic switch
<a href="#">31160-ND/10</a>	magnetic switch
<a href="#">31160-NW/3</a>	Magnetic switch
<a href="#">31130-NN/3</a>	Magnetic switch
<a href="#">31967-010-05-1400</a>	Messwertgeber
<a href="#">34837-850</a>	Indicator rail
<a href="#">32607-NI10-800</a>	WEKA sensor
<a href="#">32607-NI-05</a>	Transmitter
<a href="#">37220</a>	Haltebügel
<a href="#">34837-1950</a>	Anhzeigeschiene
<a href="#">34837-1565</a>	Anhzeigeschiene
<a href="#">31967-010-10-1800</a>	level transmitter
<a href="#">31160-NN/3</a>	magnetic switch
<a href="#">31967-10-05-900</a>	Transmitters
<a href="#">DK 32</a>	Core drill motor
<a href="#">36253</a>	crossed hose clamp
<a href="#">36242</a>	WEKA Crossed Hose Clamp
<a href="#">33115/40</a>	swimmers
<a href="#">34333/05</a>	Pipe float
<a href="#">35615/05</a>	Pipe float
<a href="#">33115/60</a>	
<a href="#">33279/05</a>	Magnetic oscillator
<a href="#">38243-2</a>	Ball float
<a href="#">31160-ND/3</a>	magnetic switch
<a href="#">31160-NI/20</a>	magnetic switch

Product	Description
<a href="#">38662/20</a>	
<a href="#">34999</a>	control cone
<a href="#">33115/30</a>	swimmers
<a href="#">31130-NW/3</a>	magnetic switch
<a href="#">34560-2000</a>	Screen rail
<a href="#">31967-010-05-845</a>	Transducer
<a href="#">32607-NI10-350</a>	WEKA sensor
<a href="#">31160-NA/3</a>	Magnetic switch
<a href="#">80648</a>	Fastening clamp
<a href="#">84043</a>	Fastening clamp
<a href="#">31967-010-10-1200</a>	sensor
<a href="#">23614-K-800</a>	
<a href="#">32608-ND-10-1300</a>	transducer
<a href="#">32608-ND-10-1500</a>	transducer
<a href="#">31160-NM/3</a>	Magnetic switch
<a href="#">32608-ND-10-1800</a>	transducer
<a href="#">29710-R-ND-10-2650</a>	Transducer for HART converter 38021
<a href="#">38021</a>	converter
<a href="#">89250</a>	Switch clamp
<a href="#">89249</a>	Fastening clip
<a href="#">31967-10-010-1100</a>	transducer
<a href="#">31130-NN/10</a>	magnetic switch
<a href="#">32608-ND-10-400</a>	Transducers
<a href="#">89249 / Fastening clamp for standpipe 30/40mm</a>	Mounting bracket for standpipe
<a href="#">89250 / Fastening clamp for standpipe 40/57mm</a>	Mounting bracket for standpipe
<a href="#">DK 1603</a>	diamond core drilling machine
<a href="#">34300K-2260-ANSI-2"</a>	magnetic level indicator
<a href="#">32608-ND-10-500</a>	sensor
<a href="#">K11-Ex</a>	terminal box
<a href="#">31160-NI/3</a>	Sensor
<a href="#">DK-18</a>	diamond core drilling machine
<a href="#">31967-010-10-2800</a>	sensor
<a href="#">34000-K-1000ARMWG</a>	magnetic level indicator
<a href="#">DK30510-1</a>	
<a href="#">DK20133-1</a>	
<a href="#">34000K-602EA</a>	magnetic level indicator
<a href="#">34000K-762XEAMWG</a>	magnetic level indicator
<a href="#">34837-630</a>	display rail
<a href="#">34837-750</a>	display rail
<a href="#">47353</a>	
<a href="#">47354</a>	
<a href="#">31160-NP</a>	magnetic switch
<a href="#">33278/30 316L</a>	magnetic float
<a href="#">DKS 15</a>	Diamond Core Drill
<a href="#">DK16108</a>	Armature with Fan and Bearings

<b>Product</b>	<b>Description</b>
<a href="#">DK20125</a>	Carbon Brush
<a href="#">DK20105</a>	ventilator
<a href="#">DK10117</a>	Brush holder
<a href="#">item 85 of the drawing</a>	
<a href="#">MS10510S</a>	control board
<a href="#">31967-010-10-1500</a>	Transmitter
<a href="#">34000-O-400</a>	magnetic level indicator
<a href="#">23411-K-1500</a>	magnetic level indicator
<a href="#">34837 1000MM</a>	display rail
<a href="#">23614-K-1000-2"EA</a>	magnetic level indicator
<a href="#">34837-2400</a>	display rail
<a href="#">33278/05</a>	magnetic swimmer
<a href="#">34300K-4350</a>	magnetic level indicator
<a href="#">41008</a>	PC display rail
<a href="#">23614K-1445-ANSI-1"</a>	magnetic level indicator
<a href="#">34300K-865-ANSI-3/4"</a>	magnetic level indicator
<a href="#">32755K-865-ANSI-3/4"</a>	magnetic level indicator
<a href="#">32755K-840-ANSI-3/4"</a>	magnetic level indicator
<a href="#">23614K-800-ANSI-2"</a>	magnetic level indicator
<a href="#">34300K-600-ANSI-2"</a>	magnetic level indicator
<a href="#">34300K-1195-ANSI-3/4"</a>	magnetic level indicator
<a href="#">3487-2400</a>	display rail
<a href="#">33279/30</a>	magnetic swimmer
<a href="#">34000-O-2713</a>	magnetic level indicator
<a href="#">Inspection WEKA flat rate</a>	Inspection
<a href="#">34837-240</a>	display rail